

安装注意事项

1. 电源线如有破损，应即停止使用。
2. 电源插头和插座应相容。
3. 机器不应放在下列地方：通风不良处；多尘、潮湿处；阳光直射处；环境温度高或接近热源的地方；容易倾覆、易受振动、易被饮料和其他液体污染的地方。

性能规格

输入	Mic: 8.0mV, 不平衡 Line: 0dBV, 不平衡
声频信号输出	0dBV
频响	Mic: 100Hz-15kHz; Line: 20Hz-20kHz
信噪比	Mic input 不小于 60dB Line input 不小于 70dB
保护	AC 保险丝 200mA
电源	AC 220-240V/50-60Hz
尺寸	270×180×55mm
毛重	1.5kg
净重	1.2kg

性能规格改变恕不另行通知。

注 意

请勿随意打开机器盖板，以防触电。必要时须由有专业证书之专业人员进行修理。

DSPPA Acoustic Technology Co., Ltd.

DSPPA

MAG1488II

Remote Paging Selector




OWNER'S MANUAL

Before operating, please read this manual completely.

FEATURES

- | 100 Zones for directly selecting.
- | Remote distance up to 1 km.
- | 1 MIC and 1 LINE input. Volume variable.
- | 2 Chimes function.
- | Muting function.
- | "Busy" indicator & sound level meter.

FRONT PANEL

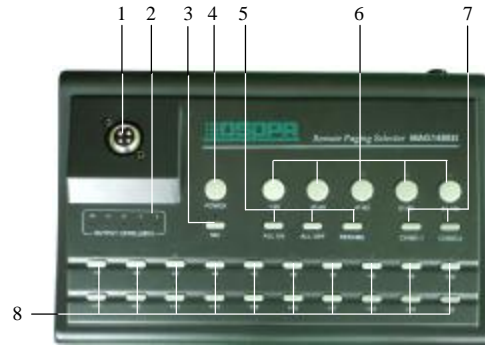

- | | | |
|-------------------|--------------------|--------------------|
| 1 XLR MIC Base | 4 Power Switch | 7 Chime Keys |
| 2 Level indicator | 5 Function Keys | 8 Zone Select Keys |
| 3 MIC Switch | 6 Range Select Key | |

REAR PANEL




- | | | |
|--------------|----------------|---------------|
| 1 Fuse | 4 Chime Volume | 7 Remote Port |
| 2 Mains | 5 Line Input | |
| 3 Mic volume | 6 Audio Output | |

MUTING FUNCTION

Signal from **LINE** is automatically muted by signal from **MIC** or **CHIME**.


连接方法

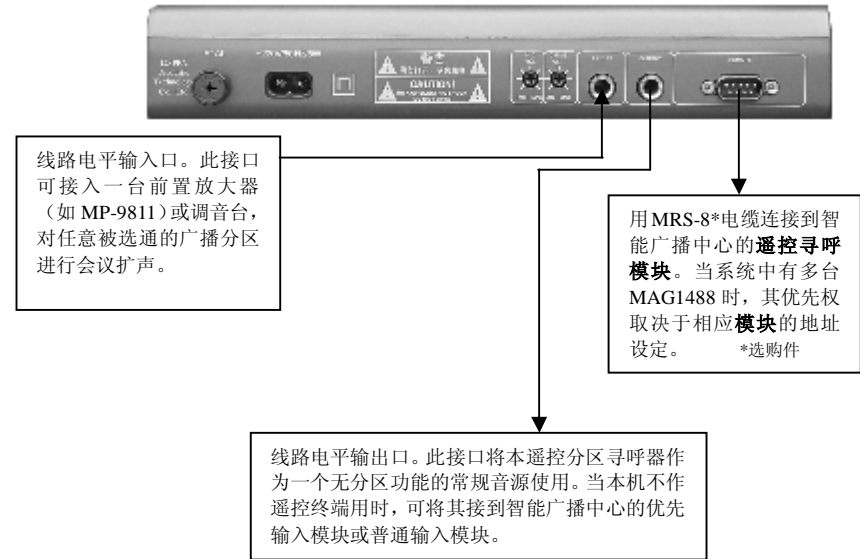

使用方法


1. 接好线路，将鹅颈话筒（附件）插上。打开电源。
2. 面板上有 5 个分区范围选择开关，当选择范围为 1-20 时（相应的指示灯亮），可以对 1-20 分区进行寻呼操作，当选择范围为 21-40 时（相应的指示灯亮），可以对 21-40 分区进行寻呼操作，其他依次类推，按下某范围选择键，能自动显示当前区间段的寻呼情况。
3. 按直选键+1- +20 可寻呼或关闭对应的分区（相应的指示灯亮表示打开寻呼，灯灭表示关闭寻呼）。按 ALL-ON 可选通所有分区。按 ALL-OFF 可关闭所有分区寻呼，按 RESUME 键，可使各分区回到按过 ALL-ON、ALL-OFF 之前的状态。当某些分区指示灯闪烁时，表示它们已被其他寻呼器占用，只允许优先权更高的寻呼器接管。
4. 按 CHIME-1 或 CHIME-2 可向寻呼区发出提示钟声。**CHIME-1** 的旋律为 ‘1 3 5 i --’；**CHIME-2** 的旋律为 ‘i 5 3 1 --’。通过后面板 **CHIME VOL** 可调节钟声输出音量。
5. 按 MIC 键（MIC 指示灯点亮），即可向被选择的分区发布寻呼广播。寻呼完毕，请关闭 MIC 开关和关闭刚才寻呼的分区。
6. 需要取下鹅颈话筒时，按下话筒座旁的压片，即可向上拨出。长期不用应关闭电源。

前面板

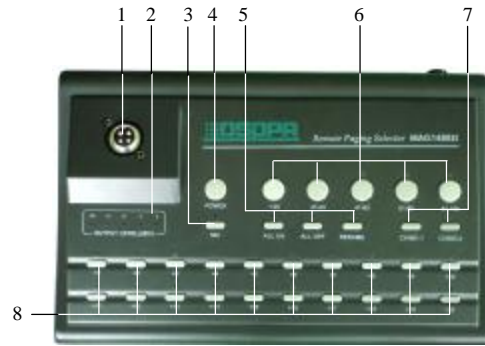

- | | | |
|----------|-------------|----------------|
| 1 鹅颈话筒插座 | 4 电源开关 | 7 钟声键 |
| 2 电平指示 | 5 全开/全关/恢复键 | 8 +1~+20 分区直选键 |
| 3 话筒开关 | 6 分区范围选择键 | |

后面板

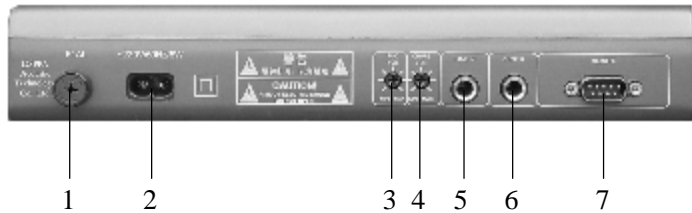


- | | | |
|----------|----------|---------|
| 1 保险丝 | 4 钟声音量调节 | 7 遥控联机口 |
| 2 电源线 | 5 线路输入口 | |
| 3 话筒音量调节 | 6 音频输出 | |

自动静音功能

话筒、钟声属优先信号，这些信号将自动抑制线路输入信号。

CONNECTIONS

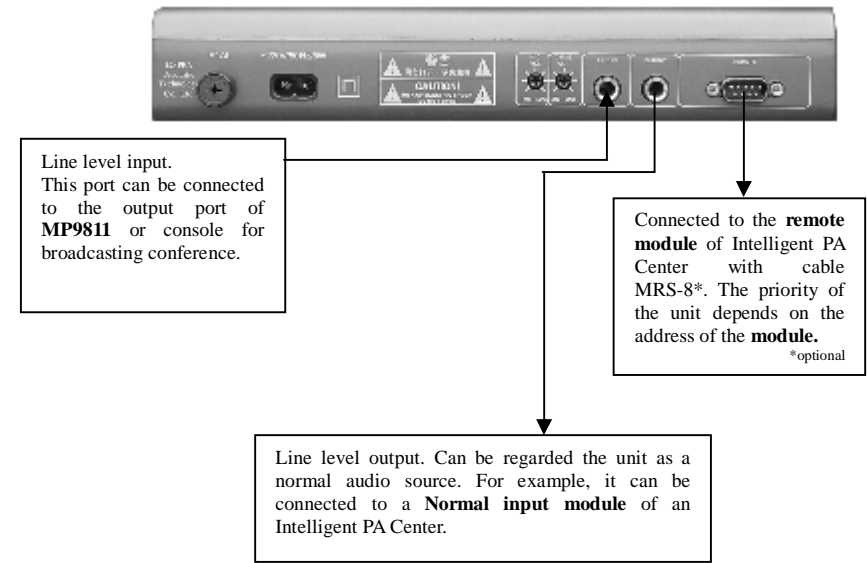

OPERATION

1. Fix the **MIC** head, and then turn on the power.
2. Press the range select key 1-20, you can switch on paging zones 1 to 20, in the same way press the range select key 21-40, you can switch on paging zones 21 to 40, most 100 zones can be operated.
3. Press one or more keys of **Zone Select** for switching on paging zones (the indicators lit). If there is any zone in busy, the indicator will flash. In this case, only the terminal with higher priority can take it over.
4. Press key **Chime-1** or **Chime-2** to send a Chime out. **CHIME-1** for '1 3 5 i --' and **CHIME-2** for 'i 5 3 1 --'. Chime volume can be adjusted with **CHIME VOL** on rear panel.
5. Press key **MIC** (the indicator lit) for broadcasting with the microphone. Press the corresponding keys again or press key ALL-OFF instead of **Zone Select** keys for reset (the indicators gone off) when done.
6. Press key **RESUME** returning to the status before key ALL-ON or ALL-OFF be pressed.
7. Turn off the power when doesn't run chronically.

PRECAUTIONS

1 The unit should not be placed areas:

- 1) with poor ventilation.
- 2) exposed to direct sunlight.
- 3) with high ambient temperature or adjacent to heat generating equipment.
- 4) with high humidity or dust levels.
- 5) susceptible to vibration or overthrow.

2 Make sure the power outlet conforms to the plug of the unit and is provided with ground terminal.

3 Do not use this unit if the electrical power cord is frayed or broken.

SPECIFICATIONS

Inputs	Mic: 8.0mV, unbalanced Line: 0dBV, unbalanced
Audio output	0dBV
Frequency response	Mic: 100Hz-15kHz; Line: 20Hz-20kHz
Signal to noise ratio	Mic input: greater than 60dB Line input: greater than 70dB
Protection	AC fuse 200mA
Power Requirement	AC 220-240V/50-60Hz
Dimensions	270×180×55mm
Gross weight	1.5kg
Net weight	1.2kg

Specifications are subject to be changed without notice.

CAUTION

To reduce the risk of electric shock, do not remove the cover.
No user parts inside. Refer servicing to qualified service personnel.

DSPPA Acoustic Technology Co., Ltd.

DSPPA

MAG1488II

遥控分区寻呼器



使用说明

欢迎惠顾。您对本产品之选用显示了您的专业眼光。使用前请仔细阅读本说明书。

性能特点

- 1 最多可控制 100 个分区
- 1 遥控距离可达一公里
- 1 自带 1 只话筒，外加 1 个线路输入口，音量可调
- 1 内置两种实用钟声
- 1 具有线路输入静音的功能
- 1 电平指示，占线指示