

IP to RS-232 Converter

EXT-IP-2-RS2322

User Manual



Release A3

Important Safety Instructions

- 1. Read these instructions.
- 2. Keep these instructions.
- 3. Heed all warnings.
- 4. Follow all instructions.
- 5. Do not use this product near water.
- 6. Clean only with a dry cloth.
- 7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8. Do not install or place this product near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11. Only use attachments/accessories specified by the manufacturer.
- 12. To reduce the risk of electric shock and/or damage to this product, never handle or touch this unit or power cord if your hands are wet or damp. Do not expose this product to rain or moisture.
- 13. Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15. Batteries that may be included with this product and/or accessories should never be exposed to open flame or excessive heat. Always dispose of used batteries according to the instructions.

Gefen warrants the equipment it manufactures to be free from defects in material and workmanship.

If equipment fails because of such defects and Gefen is notified within two (2) years from the date of shipment, Gefen will, at its option, repair or replace the equipment, provided that the equipment has not been subjected to mechanical, electrical, or other abuse or modifications. Equipment that fails under conditions other than those covered will be repaired at the current price of parts and labor in effect at the time of repair. Such repairs are warranted for ninety (90) days from the day of reshipment to the Buyer.

This warranty is in lieu of all other warranties expressed or implied, including without limitation, any implied warranty or merchantability or fitness for any particular purpose, all of which are expressly disclaimed.

- 1. Proof of sale may be required in order to claim warranty.
- 2. Customers outside the US are responsible for shipping charges to and from Gefen.
- 3. Copper cables are limited to a 30 day warranty and cables must be in their original condition.

The information in this manual has been carefully checked and is believed to be accurate. However, Gefen assumes no responsibility for any inaccuracies that may be contained in this manual. In no event will Gefen be liable for direct, indirect, special, incidental, or consequential damages resulting from any defect or omission in this manual, even if advised of the possibility of such damages. The technical information contained herein regarding the features and specifications is subject to change without notice.

For the latest warranty coverage information, refer to the Warranty and Return Policy under the Support section of the Gefen Web site at www.gefen.com.

Contacting Gefen Technical Support

Technical Support

(818) 772-9100 (800) 545-6900 8:00 AM to 5:00 PM Monday - Friday, Pacific Time

Fax

(818) 772-9120

Email

support@gefen.com

Web

http://www.gefen.com

Mailing Address

Gefen, LLC c/o Customer Service 20600 Nordhoff St. Chatsworth, CA 91311

Product Registration

Register your product here: <u>http://www.gefen.com/kvm/Registry/Registration.jsp</u>

Operating Notes

 When using the IP to 2 x RS-232 Converter for the first time, it is recommended that the unit be configured using the Gefen Discovery Tool. The Gefen Discovery Tool is free software that is available from the Support > Downloads section of the Gefen Web site.

IP to 2 x RS-232 Converter is a trademark of Gefen, LLC.

© 2015 Gefen, LLC. All Rights Reserved. All trademarks are the property of their respective owners.

Gefen, LLC reserves the right to make changes in the hardware, packaging, and any accompanying documentation without prior written notice.











RoHS

This product uses UL or CE listed power supplies.

Licensing

This product uses software that is subject to open source licenses, including one or more of the General Public License Version 2 and Version 2.1, Lesser General Public License Version 2.1 and Version 3, BSD, and BSD-style licenses. Distribution and use of this product is subject to the license terms and limitations of liability provided in those licenses. Specific license terms and Copyright Notifications are provided in the source code. For three years from date of activation of this product, any party may request, and we will supply, for software covered by an applicable license (e.g. GPL or LGPL), a complete machine-readable copy of the corresponding open source code on a medium customarily used for software interchange. The following software and libraries are included with this product and subject to their respective open source licenses:

- IwIP
- freeRTOS
- jQuery

IwIP is licenced under the BSD licence:

Copyright (c) 2001-2004 Swedish Institute of Computer Science. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- 3. The name of the author may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR ``AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Features

- Allows IP control of two RS-232-enabled devices
- Supports Telnet and UDP protocols
- · Each of the RS-232 devices can be addressed independently
- Configurable via Web server interface
- Independently configurable RS-232 baud rate and line delay for each RS-232 port
- Gefen Discovery Tool-compatible
- Field-upgradable firmware via Web server interface
- Locking power supply connector
- Surface-mountable

Packing List

The IP to 2 x RS-232 Converter ships with the items listed below. If any of these items are not present in your box when you first open it, immediately contact your dealer or Gefen.

- 1 x IP to 2 x RS-232 Converter
- 1 x 5V DC Power Supply
- 1 x Quick-Start Guide

1 Getting Started

Introduction	2
Installation	4
Connection Instructions	4
Sample Wiring Diagram	4

2 Advanced Operation

RS-232 and IP Configuration	8
Configuration using the Gefen Discovery Tool	8
Configuration using RS-232	9
Commands	11
Web Interface	53
Using the built-in Web Interface	53
RS-232	54
Network tab	60
System tab	66

3 Appendix

Default Settings	
RS-232	
Network	
Specifications	

IP to RS-232 Converter

1

Getting Started

ntro	duction	2
nsta	Illation	4
	Connection Instructions	4
	Sample Wiring Diagram	4

Introduction





ID	Name	Description
1	IP Reset	Resets the unit to its default IP settings.
2	RS-232 1	Connect an RS-232 cable from this port to an RS-232 device. See Installation (page 4) for more information.
3	Power	This LED will glow bright blue when the unit is powered.
4	5V DC	Connect the included 5V DC power supply to this power receptacle.
5	IP control	Connect an Ethernet cable between this jack and an IP-based automation control device
6	RS-232 2	Connect an RS-232 cable from this port to an RS-232 device. See Installation (page 4) for more information.

Installation

1. Connect an Ethernet cable between the IP-based control device and the **IP control** port on the IP to 2 x RS-232 Converter.

An Ethernet switch can also exist between the IP to 2 x RS-232 Converter and the IP-based control device (see Sample Wiring Diagram below).

- 2. Connect an RS-232 device to each of the RS-232 ports (RS-232 1 and RS-232 2) on the IP to 2 x RS-232 Converter.
- 3. Connect the included 5V DC locking power supply to the 5V DC power receptacle on the IP to 2 x RS-232 Converter. Do not overtighten the locking power connectors.
- 4. Connect the AC power cord from the power supply to an available electrical outlet.

Sample Wiring Diagram



IP to RS-232 Converter

2

Advanced Operation

RS-232 and IP Configuration	8
Configuration using the Gefen Discovery Tool	8
Configuration using RS-232	9
Commands	11
Web Interface	53
Using the built-in Web Interface	53
RS-232	. 54
Network tab	60
System tab	66

Configuration using the Gefen Discovery Tool

When using the IP to $2 \times RS-232$ Converter for the first time, it is recommended that the unit be configured using the Gefen Discovery Tool. The Gefen Discovery Tool is free software that is available from the Support > Downloads section of the Gefen Web site.

- 1. Download the Gefen Discovery Tool from the Gefen Web site. Extract the files from the .zip file and follow the installation and configuration instructions in the included User Manual.
- 2. Connect the IP to 2 x RS-232 Converter to the network.
- 3. Use the Gefen Discovery Tool to identify the unit on the network.
- Refer to the Gefen Discovery Tool User Manual for important information on setting the IP address, subnet mask, gateway, HTTP listening port, and Telnet listening port.

The following table lists the diefault IP settings for the IP to 2 x RS-232 Converter.

Description	IP Address / Port	Description	IP Address / Port
IP Address	192.168.1.72	UDP Port	23
Subnet	255.255.255.0	Local UDP Port	50007
Gateway	192.168.1.254	Remote UDP IP	192.168.1.255
HTTP Port	80	Remote UDP Port	50008

- After the IP settings have been set, make sure to click the Save button in the Gefen Discovery Tool to save the changes. After saving the changes, click the Reboot button to reboot the unit.
- 6. Launch a Web browser and enter the IP address, that was assigned to the IP to 2 x RS-232 Converter, in the address bar to access the Web interface.

Configuration using RS-232

To configure the IP settings of the IP to 2 x RS-232 Converter using RS-232 commands, use the following procedure:

1. Connect a *null-modem* ("crossover") cable from the RS-232 port on the computer to the IP to 2 x RS-232 Converter.

The null-modem cable can be connected to either RS-232 1 or RS-232 2.

Diagram 2.1 - Configuration using a null-modem cable.



PC with terminal-emulation

IP to 2 x RS-232 Converter

2. Use the following COM port settings in the terminal program:

Description	Setting
Baud rate	19200
Data bits	8
Parity	None
Stop bits	1
Hardware flow control	None

- 3. Set the IP address using the <code>#set_ipadd</code> command.
- 4. Set the subnet mask using the #set_netmask command.

(continued on next page)

- 5. Set the gateway (router) IP address using the <code>#set_gateway</code> command.
- 6. Set the Telnet listening port using the #set_tcp_term_port command.
- 7. Set the HTTP listening port using the #set_http_port command.
- 8. Set the UDP remote IP address using the #set udp rip command.
- 9. Set the UDP listening port using the #set_udp_port command.
- 10. Set the UDP remote port using the #set udp rport command.
- 11. Reboot the IP to 2 x RS-232 Converter to apply all changes.
- 12. Launch the desired Web browser and enter the IP address, specified in step 3, in the address bar to access the Web interface.



Information

Depending upon the network, all related IP, Telnet, and UDP settings will need to be assigned. If necessary, consult your network administrator to obtain the proper settings.

Commands

Command	Description
#help	Displays a list of all available commands
#set_add_delim	Enables or disables option to add delimiter to data
#set_device_descr	Sets the device description
#set_end_del	Sets the end frame delimiter
#set_gateway	Sets the gateway (router) IP address
<pre>#set_http_port</pre>	Sets the HTTP listening port of the IP to RS-232 Converter
#set_ipadd	Sets the IP address of the IP to RS-232 Converter
#set_netmask	Sets the subnet mask of the IP to RS-232 Converter
<pre>#set_send_byte_cnt</pre>	Sets the send-byte count value for bridging mode
<pre>#set_send_time_out</pre>	Sets the time-out value for sending data
<pre>#set_serial_descr</pre>	Assigns a description to the specified RS-232 port
<pre>#set_serial_mode</pre>	Sets the serial mode (TCP, UDP, or Terminal)
<pre>#set_serial_params</pre>	Assigns the settings to the specified RS-232 port
<pre>#set_start_del</pre>	Sets the Start Frame delimiter
#set_tcp_br_port	Sets the TCP bridge listening port
<pre>#set_tcp_term_port</pre>	Sets the TCP terminal listening port
<pre>#set_telnet_pass</pre>	Sets the TCP terminal password
#set_udp_br_port	Sets the UDP bridge listening port
#set_udp_echo_br	Enables or disables UDP bridge echo
#set_udp_port	Sets the UDP listening port
<pre>#set_udp_remote_br</pre>	Assigns the UDP bridge settings for the specified RS-232 port
#set_udp_rip	Sets the remote UDP IP address
#set_udp_rport	Sets the UDP remote port
#show_del_prms	Dusplays the current delimiter parameters for the specified serial port
#show_device_descr	Displays the device description
#show_ipconfig	Displays the current TCP/IP and UDP settings of the IP to 2 x RS-232 Converter
#show_me	Enables or disables the flashing of the LED on the device
#show_serial_descr	Displays the current description of the specified RS-232 port
<pre>#show_serial_mode</pre>	Displays the mode of the specified RS-232 port

(continued on next page)

Command	Description
<pre>#show_serial_params</pre>	Displays the settings of the specified RS-232 port
#show_telnet_pass	Displays the current TCP terminal password
#show_ver_data	Displays the firmware and hardware version of the IP to RS-232 Converter
#system_wide_reset	Restarts the IP to 2 x RS-232 Converter according to the supplied parameter
#use_discovery	Enables or disables discovery mode
#use_tcp_access	Enables or disables TCP access mode
#use_tcp_term_pass	Enables or disables the password prompt at the beginning of a Telnet session
#use_udp_access	Enables or disables UDP access
#use_udp_echo	Enables or disables UDP echo

#help

Displays help on a specific command. If no command is specified (*param1*), then a list of all available commands will be displayed. Set *param1* to "full" to display a list of all commands.

Syntax

#help

Parameters

param1

Command (optional)

Example

#help #set add delim

```
Cmd #set add delim: Set Add delimiter mode
 Syntax: #set add delim [param1][pram2]
Param1: Serial Port(1,2)
Param2: 1 - On , 0 - Off
e.g: #set add delim 1 0
#help full
. . .
Cmd #show serial params: Show Serial Port Parameters
 Syntax: #show serial params
Param: Serial Port(1,2)
e.g: #show serial params 1
Cmd #set serial mode: Set Serial Port mode
 Syntax: #set uart mode [param1][param2]
Param1: Serial Port(1,2)
Param2: 1 (Terminal) for Port1 only,2 (TCP Bridge),3 (UDP Bridge)
e.g: #set serial mode 1 2
. . .
```

. . .

(continued on next page)

#help

Advanced Operation

#show ipconfig #set_ipadd #set netmask #set gateway #set http port #set tcp term port #set udp port #show ver data #show telnet pass #set_telnet_pass #use_tcp_term_pass #set udp rip #set udp rport #use udp access #use udp echo #use_tcp_access #set serial params #show serial params #set serial mode #show serial mode #show_serial_connect #set_serial_descr #show serial_descr #set tcp br port #set udp br port #set udp remote br #set udp echo br #use discovery #set add delim #set start del #set end del #set send time out #set send byte cnt #show del prms #set device descr #show device descr #show me #system_wide_reset

#set_add_delim

Enables or disables the option to include a delimiter as part of the data sent to the control system.

Syntax

#set add delim param1 param2

Parameters

param1	Value		[1 2]
param2	State		[0 1]
	Value	Description	

Off

On

0

1

Example	

#set_add_delim 1
Add delimiter mode to ON

Related Commands

#set_end_del
#set start del

#set_device_descr

Sets the device description. The device description cannot exceed 30 characters in length

Syntax

#set_device_descr param1

Parameters

param1

Description

[30 chars max.]

Example

#set_device_descr LivingRoom_Bridge2
Device Description changed to: LivingRoom Bridge2

Related Commands

#show_device_descr

#set_end_del

Sets the end-delimiter mode and value for the specified serial port. The End Delimiter value must be specified in hexadecimal. Before executing this command, the Start Delimiter must be set, using the #set start del command.

Syntax

#set end del param1 param2 param3

Parameters

param1 param2	Serial port State		[1 2] [0 1]
	Value	Description	
	0	Off	
	1	On	

param3

End delimiter

[00 ... FF]

Example

#set_end_del 1 1 ba
End delimiter set to ON with a value of ba

Related Commands

#set_add_delim
#set_start_del

#set_gateway

Sets the gateway address. The gateway must be typed using dot-decimal notation. The matrix must be rebooted after executing this command. The default gateway is 192.168.1.1.

Syntax

#sgateway param1

Parameters

param1

Gateway

Example

#set_gateway 10.5.64.1
New IP Gateway set to: 10.5.64.1

Related Commands

#set_add_delim
#set_ipadd
#set_netmask
#show_ipconfig

#set_http_port

Specifies the Web server listening port. The unit must be rebooted after executing this command. The default port setting is 80.

Syntax

#set_http_port param1

Parameters

param1

Port

[1 ... 1024]

Example

#set_http_port 82
New HTTP port set to: 82

Related Commands

#set_gateway
#set_ipadd
#set_netmask
#show ipconfig

#set_ipadd

Specifies the IP address of the IP to $2 \times RS-232$ Converter. The IP address must be specified using dot-decimal notation. The unit must be rebooted after executing this command. The default IP address is 192.168.1.72.

Syntax

#set ipadd param1

Parameters

param1

IP address

Example

#set_ipadd 10.5.64.187
New IP set to: 10.5.64.187

Related Commands

#set_gateway
#set_http_port
#set_end_del
#show_ipconfig

#set_netmask

Sets the subnet mask. The subnet mask must be entered using dot-decimal notation. The unit must be rebooted after executing this command. The default net mask is 255.255.255.0.

Syntax

#snetmask param1

Parameters

param1

Net mask

Example

#snetmask 255.255.0.0 New IP Mask set to: 255.255.0.0

Related Commands

#set_gateway
#set_ipadd
#set_http_port
#show_ipconfig

#set_send_byte_cnt

Sets the send-byte count value for bridging mode.

Syntax

#set_send_byte_cnt param1

Parameters

param1	Serial port	[1 2]
param2	Byte count	[0 255]

Example

#set_send_byte_cnt 1 100
UART 1 bridging send byte count limit is set to 100 bytes

Related Commands

#set_add_delim
#set_end_del
#set_serial_mode
#set_start_del

#set_send_time_out

Sets the time-out value for sending data collected from a device to the control system in Bridging Mode when a Start Delimiter and End Delimiter have been set. If no data has been collected for the specified time, the data is sent without waiting for the End Delimiter.

Syntax

#set send time out param1

Parameters

param1	Serial port	[1 2]
param2	Time out (ms)	[0 255]

Example

#set_send_time_out 1 30
UART 1 bridging sent Time Out is set to 30 ms

Related Commands

#set_add_delim
#set_end_del
#set_serial_mode
#set_start_del

#set_serial_descr

Assigns a descriptor to the specified serial port. The serial port description cannot exceed 20 characters in length. The default description is None.

Syntax

#set serial descr param1 param2

Parameters

param1 param2 Port Description [1 ... 2] [20 chars max.]

Example

#set_serial_descr 1 DVD_Ctrl
Serial port 1 Description: DVD Ctrl

Related Commands

#show serial descr

#set_serial_mode

Sets the mode of the specified serial port. The default mode for all serial ports (1 - 2) is *TCP Bridge* mode.

Syntax

#set serial mode param1 param2

Parameters

param1 param2

Port State	[1 2] [1 3]
Mode	Description
1	TCP bridge
2	UDP bridge
3	Terminal mode

Example

#set_serial_mode 1 2
Serial port 1 working mode is: TCP Bridge Mode

Related Commands

#show serial mode

#set_serial_params

Assigns the settings to the specified serial port.

Syntax

#set_serial_params param1 param2 param3 param4 param5 param6

Parameters

param1	Port	[1 3]
param2	Word length	[5 8]
param3	Stop bits	[1 2]
param4	Parity	

Parity	Description
n	None
е	Even
0	Odd
m	Mark
S	Space

param5

Baud rate

Baud rate	
110	4800
300	9600
600	14400
1200	19200
2400	28800

param6

Line delay (ms) [0 ... 10000]

(continued on next page)
Example

#set_serial_params 1 8 1 N 19200 1000
Serial port 1 parameters:
 Word length = 8 bits
 Stop bits = 1 bit
 Parity = None
 Baud Rate = 19200 Bps
 Line Delay = 1000 ms

Related Commands

#show_serial_params

#set_start_del

Sets the Start Delimiter mode and value for the specified serial port. The Start Delimiter must always be specified before the End Delimiter.

Syntax

#set start del param1 param2 param3

Parameters

param1 param2	Serial port State	•	[1 2] [0 1]
	Mode	Description	
	1	TCP bridge	
	2	UDP bridge	
	3	Terminal mode	
param3	Start delim	niter	[00 FF]

Example

#set_start_del 1 1 a0
Start delimiter set to ON with a value of a0

Related Commands

#set_add_delim
#set_end_del

#set_tcp_br_port

Sets the TCP bridge listening port for the specified serial port. The default port settings for RS-232 1 and RS-232 2 ports are 49200 and 49201, respectively.

Syntax

#set_tcp_br_port param1 param2

Parameters

param1 param2

Serial port TCP port [1 ... 2] [1 ... 65535]

Example

#set_tcp_br_port 1 49200
TCP Bridge 1, port set to: 49200

Related Commands

#set_tcp_term_port
#set udp br port

#set_tcp_term_port

Sets the TCP terminal listening port. The default port settings is 23.

Syntax

#set_tcp_term_port param1

Parameters

param1

TCP port

[1 ... 65535]

Example

#set_tcp_term_port 23
New TCP Terminal port set to: 23

Related Commands

#set_tcp_br_port
#set_udp_br_port

#set_telnet_pass

Sets the TCP Terminal password. The password cannot exceed 20 characters in length. *param3* is used to verify the new password. The default password is Admin.

Syntax

#set telnet pass param1 param2 param3

Parameters

param1 param2 param3 Old password New password New password [20 chars max.] [20 chars max.] [20 chars max.]

Example

#set_telnet_pass Admin b055man b055man
TCP Terminal password updated to: b055man

Related Commands

#set_tcp_br_port

#set_udp_br_port

Sets the UDP bridge listening port. The default UDP bridge port settings for RS-232 1 and RS-232 2 ports are 50200 and 50201, respectively.

Syntax

#set_udp_br_port param1 param2

Parameters

 param1
 Serial port
 [1 ... 2]

 param2
 Port
 [1 ... 65535]

Example

#set_udp_br_port 1 50200
UDP Bridge 1, port set to: 50200

Related Commands

#set_tcp_br_port
#set_tcp_term_port
#set_start_del
#set_udp_remote_br
#set_udp_rip
#set_udp_rport

#set_udp_echo_br

Enables or disables UDP bridge echo.

Syntax

#set_udp_echo_br param1 param2

Parameters

param1 param2	Serial port State		[1 2] [0 1]
	State	Description	
	0	Disabled	
	1	Enabled	

Example

#set_udp_echo_br 1 1
The echo of UDP Bridge port 1 is enabled

Related Commands

#set_udp_br_port
#set_udp_remote_br
#set_udp_rip
#set_udp_rport

#set_udp_port

Sets the UDP server listening port

Syntax

#set_udp_port param1

Parameters

param1

Serial port

[1 ... 65535]

Example

#set_udp_port 50007
New UDP server port set to: 50007

Related Commands

#set_udp_br_port
#set_udp_remote_br
#set_udp_echo_br
#set_udp_rip
#set_udp_rport

#set_udp remote_br

Assigns the UDP Bridge settings for the specified serial port. *param2* must be entered in dot-decimal notation.

Syntax

#set_udp_remote_br param1 param2 param3

Parameters

param1	Serial port	[1 2]
param2	Address	
param3	Remote port	[1 65535]

Example

#set_udp_remote_br 1 192.168.1.70 51000
Remote UDP bridge 1 set to: IP=192.168.1.70 Port=51000

Related Commands

#set_udp_port
#set_udp_br_port
#set_udp_echo_br
#set_udp_rip
#set_udp_rport

#set_udp_rip

Sets the remote UDP IP address. The IP address must be entered using dot-decimal notation. Each digit can range between 0 and 255.

Syntax

#set_udp_rip param1

Parameters

param1

IP address

Example

#set_udp_rip 192.168.1.205
New Remote UDP IP set to: 192.168.1.205

Related Commands

#set_udp_br_port
#set_udp_echo_br
#set_udp_remote_br
#set_udp_echo_br

#set_udp_rport

Sets the remote UDP listening port. The default port settings is 50008.

Syntax

#set_udp_rport param1

Parameters

param1

Port

[1 ... 65535]

Example

#set_udp_rport 50006
New UDP Remote port set to: 50006

Related Commands

#set_udp_br_port
#set_udp_echo_br
#set_udp_remote_br
#set_udp_rip

#show_del_prms

Displays the current delimiter parameters for the specified serial port.

Syntax

#show_del_prms param1

Parameters

param1

Port

[1 ... 2]

Example

#show_del_prms 1
Delimiter Param's in bridge mode, UART 1
Line Delay = 1000ms
Time To Force Send = 30ms
Count Byte To Force Send = 100
Add Delimiters In Data = False
Use Start Delimiter = False
Start Delimiter Size = 1
Start Delimiter Value = A0
Use End Delimiter Size = 1
Start Delimiter Size = 1
Start Delimiter Size = 1

Related Commands

```
#set_add_delim
#set_end_del
#set_send_byte_cnt
#set_send_time_out
#set_serial_params
#set_start_del
```

#show device descr

Displays the device description.

Syntax

#show_device_descr

Parameters

None

Example

#show_device_descr
Device Description: IP BRIDGE

Related Commands

#set_device_descr

Advanced Operation

#show ipconfig

Displays the current TCP/IP and UDP settings.

Syntax

#show ipconfig

Parameters

None

Example

#show ipconfig

```
----- IP to 2 x RS-232 Converter settings ------
MAC addr = 00:1C:91:01:0F:FF
IP addr = 10.5.64.254
Net Mask = 255.255.255.0
Gateway = 192.168.1.254
Web Server Port = 80
TCP Terminal Server Port = 23
TCP Terminal Access = Enabled
TCP Terminal password at login is set to OFF
UDP Access = Disabled
UDP Server Port = 50007
Enable UDP Echo = Disabled
UDP Remote IP = 192.168.1.80
UDP Remote Port = 50008
TCP Bridge 1 Port = 49200
TCP Bridge 2 Port = 49201
UDP Local Bridge 1 Port = 50200
UDP Remote Bridge 1 IP = 192.168.1.180, Port = 50000
UDP Remote Bridge 1 Echo = Disabled
UDP Local Bridge 2 Port = 50201
UDP Remote Bridge 2 IP = 192.168.1.181, Port = 50001
UDP Remote Bridge 2 Echo = Disabled
Discovery Mode: Enabled
```

Related Commands

#set gateway #set http port #set ipadd #set netmask #set tcp_br_port #set tcp term port

#set udp br port #set udp echo br #set udp port #set udp remote br #set udp rip #set udp rport

#use discovery #use tcp access #use tcp term pass #use udp access #use udp echo

page | 40

#show me

Enables or disables the flashing of the LED on the device. When enabled, the LED indicator will flash red and blue. The default setting is disabled.

Syntax

#show me param1

Parameters

param1

State

State	Description
0	Disabled
1	Enabled

Example

#show_me 1
Show me is Enabled

Related Commands

#use_discovery

#show_serial_descr

Displays the description of the specified serial port.

Syntax

#show_serial_descr param1

Parameters

param1

Port

[1 ... 2]

Example

#show_serial_descr 1
Serial port 1 Description: DVD_Ctrl

Related Commands

#set_serial_descr

#show_serial_mode

Displays the mode of the specified serial port.

Syntax

#show_serial_mode param1

Parameters

param1

Port

[1 ... 2]

Example

#show_serial_mode 1
Serial port 1 working mode is: TCP Bridge Mode

Related Commands

#set serial mode

#show serial params

Displays the current settings of the specified serial port.

Syntax

#show_serial_params param1

Parameters

param1

Port

[1 ... 2]

Example

```
#show_serial_params 1
Serial port 1 parameters:
  Word length = 8 bits
  Stop bits = 1 bit
  Parity = None
  Baud Rate = 19200 Bps
  Line Delay = 1000 ms
```

Related Commands

#set serial params

#show_telnet_pass

Displays the current TCP terminal password.

Syntax

#show_telnet_pass

Parameters

None

Example

#show_telnet_pass
TCP Terminal password: b055man

Related Commands

#set_telnet_pass

#show_ver_data

Displays the current software and hardware version.

Syntax

#show_ver_data

Parameters

None

Example

#show_ver_data
Firmware version 1.48
Release date: May 12 2014
Release time: 14:09:37

#system_wide_reset

Restarts the IP to 2 x RS-232 Converter according to the supplied parameter.

Syntax

#system_wide_reset param1

Parameters

param1

Value

[0 ... 3]

Value	Description
0	Reboot only
1	Reset IP settings
2	Reset serial port settings
3	Reset all and reboot

Example

#system wide reset 3

System wide reset in progress. Please wait... Finish selected operation. Device will be reset and all connections will be closed.

#use_discovery

Enables or disables discovery access mode. If this mode is disabled, then the IP to 2 x RS-232 Converter will not be discoverable when using the Gefen Discovery Tool. The default setting is *enabled*.

Syntax

#use discovery param1

Parameters

param1

State

State	Description	
0	Discovery access disabled	
1	Discovery access enabled	

Example

#use_discovery 1
Discovery Access is set to Enabled

Related Commands

#show me

#use_tcp_access

Enables or disables TCP access mode. This mode must be enabled before using RS-232 command to configure the IP to 2 x RS-232 Converter.

Syntax

#use tcp access param1

Parameters

param1

Value		[0 1]
Value	Description	
0	Disable TCP access	
1	Enable TCP access	

Example

#use_tcp_access 1
TCP Access is set to Enabled

Related Commands

#set_tcp_br_port
#set_tcp_term_port
#set_telnet_pass
#use_tcp_term_pass

#use_tcp_term_pass

Enables or disables the use of the password during terminal sessions.

Value

Syntax

#use_tcp_term_pass param1

Parameters

param1

[0 ... 1]

Value	Description
0	Do not use password
1	Require password

Example

#use_tcp_term_pass 1
TCP Terminal password at login is set to ON

Related Commands

#set_tcp_br_port
#set_tcp_term_port
#set_telnet_pass
#use_discovery

#use_udp_access

Enables or disables UDP access.

Syntax

#use_udp_access param1

Parameters

param1

Value

[0 ... 1]

Value	Description
0	Disable UDP access
1	Enable UDP access

Example

#use_udp_access 1
UDP Access is set to Enabled

Related Commands

#set_udp_br_port
#set_udp_echo_br
#set_udp_remote_br
#set_udp_rip
#set_udp_rport

#use_udp_echo

Enables or disables UDP echo.

Syntax

#use_udp_echo param1

Parameters

param1

Value

[0 ... 1]

Value	Description
0	Disable UDP echo
1	Enable UDP echo

Example

#use_udp_echo 1
UDP echo is set to Enabled

Related Commands

#set_udp_echo_br

Using the built-in Web Interface

Access the built-in Web interface by entering the IP address of the IP to 2 x RS-232 Converter that was specified in step 3 under Configuration using RS-232 (page 9).

The built-in Web interface is divided into three pages: **RS-232**, **Network**, and **System**. Each main page is represented by a tab at the top of the screen. The RS-232 page will always be displayed first.



Help

Click the **Help** button to display context-sensitive help for the current page. The help window can be moved to any position within the Web browser window.

RS-232 Settings Help

Select RS-232 Port

Select the RS-232 port to configure. 2 ports are available. NOTE: Save settings t selecting a new port to configure or changes will be lost.

Description

Enter an optional description for the RS-232 output (20 character max)

RS-232 Mode

Select the mode for the selected port

TCP Bridge – Connect to the device using TCP (Slower than UDP, guaranteed)

RS-232

Select RS-232 P Description RS-232 Mode	ort 1 None TCP Bridge	 ▼ ▼
	Gefen IF To RS-232 Bridge	EXT-IP-2-RS2322
	Head Head Head Sec. 12.2 arr 1 1 Debugstop 12 1 <td></td>	

Select RS-232 Port

Select the RS-232 port from the drop-down list.

Options: 1, 2

Description

Enter a description for the device that is connected to the selected RS-232 port.

RS-232 Mode

Select the desired mode from the drop-down list.

Options: TCP Bridge, UDP Bridge, Terminal

KS-ZSZ Setun		
Baud Rate	19200	-
Data Bits	8	▼
Parity	None	•
Stop Bits	1	•
	Gefen IP To RS-232 Bridge R-452 Network System Select 85222 Pert 1	EXT-IP-2-RS2322
	R5-232 Mode TO'Bindge R5-232 Mode TO'Bindge Build Role 10000 Data Bits B Party Noise Strap Bits 1	
	Bidgop Atflight Lind Daip (m) Star Daip (m) Yes Set (p) All Delrich to day and Die Star Delrich Die Star Delrich Die Star Delrich Die Delrich	
	LUP E (con 2/m UUP E (con 2/m Destinations Pot 2/02 (cf.) 110 Costinutions Pot 2/m UCP E (con 2/m	

Baud Rate

Select the baud rate used by the RS-232 device from this drop-down list.

Options: 110, 300, 600, 1200, 2400, 4800, 9600, 14400, 19200, 28800

Data Bits

Select the number of data bits in each character from this drop-down list. For most applications, 8 data bits should be selected. 9 data bits are rarely used.

Options: 8, 9

Parity

Select the parity bit type from this drop-down list.

Options: None, Even, Even Stick, Odd, Odd Stick

Stop Bits

Select the number of stop bits from this drop-down list.

Options: 1, 2

				1
	Bridging Settings			
	Line Delay (ms)		0	
	Force Send (ms	5)	30	
	Force Send (bytes) Add Delimiters to data sent Use Start Delimiter Start Delimiter Value		100	
			Add	
			🔲 Use	
	Use End Delimi	ter	Use	
	End Delimiter V	alue		
	TCP Port		49200	2322
	UDP Local Port		234	2 Holp
_		IN 32 MAR INF ENGINE IN 2322 Methods Hand Tana INF Hand Tana IN		

Line Delay (ms)

Enter the line delay in this field.

Range: 0 ... 10000

Force Send (ms)

If no data is received from the controlled device within the specified time interval, send the collected data to the control system.

Range: 0 ... 30

Force Send (bytes)

If the specified number of bytes is received from the controlled device, send the collected data to the control system.

Range: 0 ... 255

Bridging Settings	
Line Delay (ms)	0
Force Send (ms)	30
Force Send (bytes)	100
Add Delimiters to data sent	Add
Use Start Delimiter	Use Use
Start Delimiter Value	
Use End Delimiter	Use
End Delimiter Value	
TCP Port	49200
UDP Local Port	234

Add Delimiters to data sent

Include the delimiter characters in the data sent to the control system. Check the **Add** box to enable this feature.

Options: Enable (checked), Disable (unchecked)

Use Start Delimiter

Includes the Start Frame Delimiter, used at the end of the preamble of an Ethernet frame.

Options: Enable (checked), Disable (unchecked)

Start Delimiter Value

This value can be up to three ASCII characters (3 bytes), in length. The value must be entered in hexadecimal (e.g 0D0A, which is CR + LF). The Start (Frame) Delimiter Value is used by some control systems to filter incoming data. Contact Gefen Technical Support for details if you need to use them.

Range: 00 ... FF ("wildcard" characters, such as **, are acceptable)

Use End Delimiter

Includes the End Frame Delimiter, used at the end of a transmission frame.

Options: Enable (checked), Disable (unchecked)

Bridging Settings	
Line Delay (ms)	0
Force Send (ms)	30
Force Send (bytes)	100
Add Delimiters to data sent	Add 📃
Use Start Delimiter	Use Use
Start Delimiter Value	
Use End Delimiter	Use
End Delimiter Value	
TCP Port	49200
UDP Local Port	234

End Delimiter Value

This value can be up to three ASCII characters (3 bytes), in length. The value must be entered in hexadecimal

Range: 00 ... FF ("wildcard" characters, such as **, are acceptable)

TCP Port

Enter the TCP port in this field.

Range: 0 ... 65535

UDP Local Port

Enter the UPD local port in this field.

Range: 1024 ... 65535

UDP Echo]	
Destination IP	192.168	8.1.180		
Destination Port	50000			
UDP Echo	Enab	le		
Set I	Defaults	Save	2-R\$2322	
	P Bettings UC ANNO (UN IN 2018) UC ANNO (UN IN 2018) D Advance Anno (UN IN 2018) D Advance UN IN 2018 D Advance UN			

Destination IP

Enter the destination (where the data will be sent) IP address in this field.

Range (per byte): 0 ... 255

Destination Port

Enter the destination port in this field.

Range: 1024 ... 65535

UDP Echo

Useful in troubleshooting and measuring response times and end-to-end connectivity.

Options: Enable (checked), Disable (unchecked)

Set Defaults

Click this button to reset RS-232 settings to their default values.

Save

Click this button to save any changes.

Network tab



MAC Address

The MAC address of the IP to RS-232 Converter. The MAC address cannot be changed.

Mode

Select the network mode from the drop-down list.

Options: Static, DHCP

IP Address

Enter the IP address of the IP to 2 x RS-232 Converter.

Range (per byte): 0 ... 255

Subnet

Enter the subnet mask of the IP to 2 x RS-232 Converter.

Range (per byte): 0 ... 255

IP Settings	
MAC Address	00:1C:91:02:20:03
Mode	Static 👻
IP Address	192.168.1.72
Subnet	255.255.255.0
Gateway	192.168.1.254
HTTP Port	80

Gateway

The gateway (router) IP address to with the IP to 2 x RS-232 Converter is connected.

Range (per byte): 0 ... 255

HTTP Port

Select the network mode from the drop-down list.

Range (per byte): 1 ... 1024

TCP/Telnet Settir	ngs		
Enable TCP Access		\checkmark	
Require Password on Connect		\checkmark	
User Name		Admin	
Old Password			
New Password			
Confirm New Password			
Terminal Port		23	2322 7 Mala
UP 2014 Balance State St	Annual of the second se		I

Enable TCP Access

Enables or disables TCP access.

Options: Enable (checked), Disable (unckecked)

Require Password on Connect

Forces password prompt for Telnet sessions.

Options: Enable (checked), Disable (unckecked)

User Name

Displays the user name for TCP sessions. The user name cannot be changed.

Old Password

Type the current (old) password in this field. The password is automatically masked when entered. The password is case-sensitive. The default password is Admin.

Maximum length: 8 characters
TCP/Telnet Settings	
Enable TCP Access	\checkmark
Require Password on Connect	\checkmark
User Name	Admin
Old Password	
New Password	
Confirm New Password	
Terminal Port	23

New Password

Type the new password in this field. The password is automatically masked when entered. The password is case-sensitive.

Maximum length: 8 characters

Confirm Password

Re-type the new password in this field. The password *must* match the same password that was entered in the **New Password** field.

Maximum length: 8 characters

Terminal Port

Type the Telnet listening port in this field.

Range: 1 ... 1024



Enable UDP Access

Enables or disables UDP access.

Options: Enable (checked), Disable (unckecked)

UDP Port Sets the UDP port.

Range: 1 ... 1024

Enable UDP Echo

Enables or disables UDP echo.

Options: Enable (checked), Disable (unckecked)

UDP Settings			
Enable UDP Access			
UDP Port	8		
Enable UDP Echo			
Destination UDP IP Address	192.168.1.129		
Destination UDP Port	50008		
Discovery Protocol Sett Enable Discovery	Discovery Protocol Settings Enable Discovery		
Set Network Defaults Save			

Destination UDP IP Address

Enter the remote UDP IP address in this field.

Range (per byte): 0 ... 255

Destination UDP Port

Type the remote UDP port in this field.

Range: 1 ... 1024

Enable Discovery

Enables or disables discovery mode. This feature must be enabled in order for the Gefen Discovery Tool to detect the unit on a network.

Options: Enable (checked), Disable (unckecked)

System tab

Download Current Configuration	Download		
Restore Configuration			
Browse	Restore		
Warning: All current settings will be lost			

Batter Bysen avec Dermite Control Control on all has mem Batter mem	RADIE Marcele Marcele Construction Marcele Construction Marcele Marcele Marcele Personant Underlief Dataset Auf Marcele Personant Underlief Dataset Auf Marcele Personant Underlief Dataset Auf Marcele Restor Marcele Marcele Restor Marcele Marcele	Base Base Description Base Base Base	Notify Note Development Development Image: Address of the low of the l
Secure Control	Pointing Control Cont	Second Control Control Control Second Second Control Control Control Second Terminant spland Control Control Second Particip Second Second Second Second	Reversed Configuration
Factory Street Encode Street S	Factor france Social storage for and Social	Parton franct to Barook Parton Barook Rabout Marco Ma	Factory files at Solar at So Solar at Solar at S
Rabot New	Rasor New	Rasar Mere	Radif Maxe

Download (Download Current Configuration)

Saves the current configuration of the IP to 2 x RS-232 Converter to a file.

Browse... (Restore Configuration)

Selects the configuration file to load. See the **Download** button, above.

Restore

Click this button to upload the selected configuration file to the IP to 2 x RS-232 Converter.

Firmware Upda Browse	te (UI ver: 1.44)	Update	
Factory Reset Select Settings for	reset Select All		
Network	N3-232	Reset	
Reboot		Reboot	
	Immer vogen gar ver. Ling Factor finant Enter finant Enter finant Enter Enter Finant Enter Finant E		

Browse... (Firmware Update)

Click this button to select the firmware file to be uploaded.

Update

Click this button to upload the selected firmware file. See the **Browse...** button, above.

Factory Reset

Use these check boxes to select the type of factory-reset to perform. Placing a check mark in the desired check box will select the type of reset:

Options: Select All (resets network and RS-232 settings), Network (resets IP settings only), RS-232 (resets RS-232 settings only)

Reset

Click this button to reset the selected options to factory-default settings.

Reboot

Click this button to reboot the IP to 2 x RS-232 Converter.

IP to RS-232 Converter

3 Appendix

Default Settings	
RS-232	
Network	
Specifications	

Default Settings

The following table lists the default setting of the IP to 2 x RS-232 Converter, as displayed under the built-in Web interface.

RS-232

RS-232 Settings		
Select RS-232 Port	•	1
Description	•	None
RS-232 Mode	•	TCP Bridge
Baud Rate	•	19200
Data Bits	•	8
Parity	•	None
Stop Bits	•	1
Bridging Settings		
Line Delay (ms)	•	0
Force Send (ms)	•	30
Force Send (bytes)	•	100
Add Delimiters to data sent	•	Disabled
Use Start Delimiter	•	Disabled
Start Delimiter Value	•	0
Use End Delimiter	•	Disabled
End Delimiter Value	•	0
TCP Port	•	49200
UDP Local Port	•	50200
UDP Echo		
Destination IP	•	192.168.1.180
Destination Port	•	50000
UDP Echo	•	Disabled

Network

IP Settings	
MAC Address	Device-dependent (cannot be changed)
Mode	Static
IP Address	• 192.168.1.72
Subnet	• 255.255.255.0
Gateway	• 192.168.1.254
HTTP Port	• 80
TCP / Telnet Settings	
Enable TCP Access	Disabled
Require Password on Connect	Disabled
User Name	Admin (cannot be changed)
Old Password	(default password is "Admin")
New Password	•
Confirm New Password	•
Terminal Port	• 23
UDP Settings	
Enable UDP Access	Disabled
UDP Port	• 50007
Enable UDP Echo	Disabled
Destination UDP IP Address	• 192.168.1.80
Destination UDP Port	• 50008
Enable Discovery	Enabled

Specifications

Connectors, Indicators, and Controls	
RS-232	• 2 x DB-9, male
IP control	• 1 x RJ-45
Power	1 x 5V DC, locking
Power indicator	1 x LED, blue
IP Reset button	1 x Tact-type, recessed

Operational		
Power	•	5V DC
Power consumption	•	1W (max.)

Physical	
Dimensions (W x H x D)	 4.3" x 1" x 3.4" (110mm x 26mm x 86mm)
Unit Weight	• 0.35 lbs. (0.16 kg)



20600 Nordhoff St., Chatsworth CA 91311 1-800-545-6900 818-772-9100 fax: 818-772-9120 www.gefen.com support@gefen.com