 




Public Address System

**CD/MP3 PLAYER**

**PC1007C**

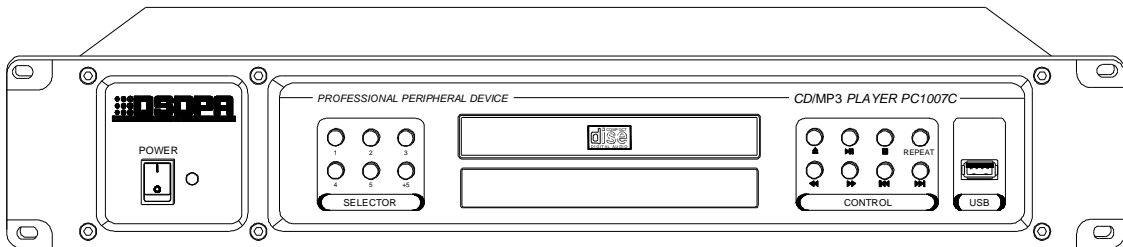

 
## OWNER'S MANUAL

Before operating, please read this manual completely.

### *FEATURES*


- | DVD/CD player function.
- | VFD display.
- | Can select any song or any paragraph for play.
- | After the POWER ON it will play in order automatically.
- | Bear USB jack.
- | Remote - control by PC available.
- | Programmed control by PC1014T.

# FRONT PANEL

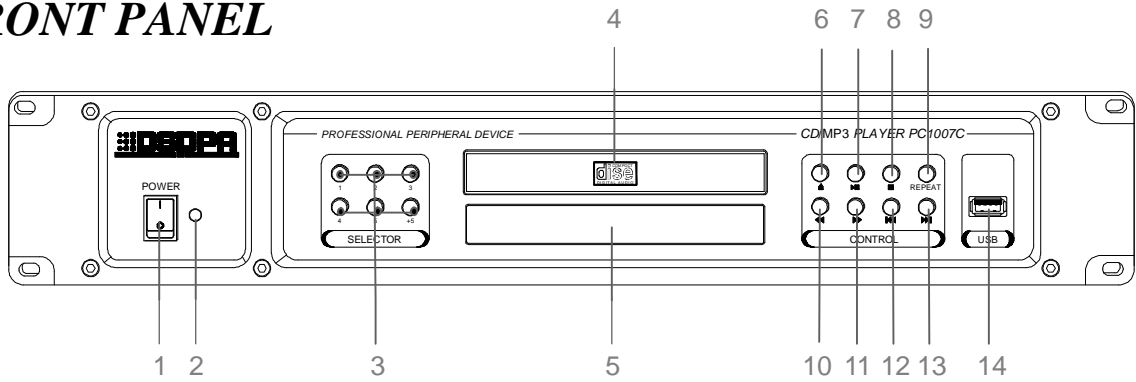

- |                      |                     |
|----------------------|---------------------|
| 1 Power switch       | 8 Stop keys         |
| 2 Power indicator    | 9 Repeat keys       |
| 3 1 ~ +5 keys        | 10 Search down keys |
| 4 Disc door          | 11 Search up keys   |
| 5 VFD Display screen | 12 Skip down keys   |
| 6 Open keys          | 13 Skip up keys     |
| 7 Play/pause keys    | 14 USB jack         |

# REAR PANEL

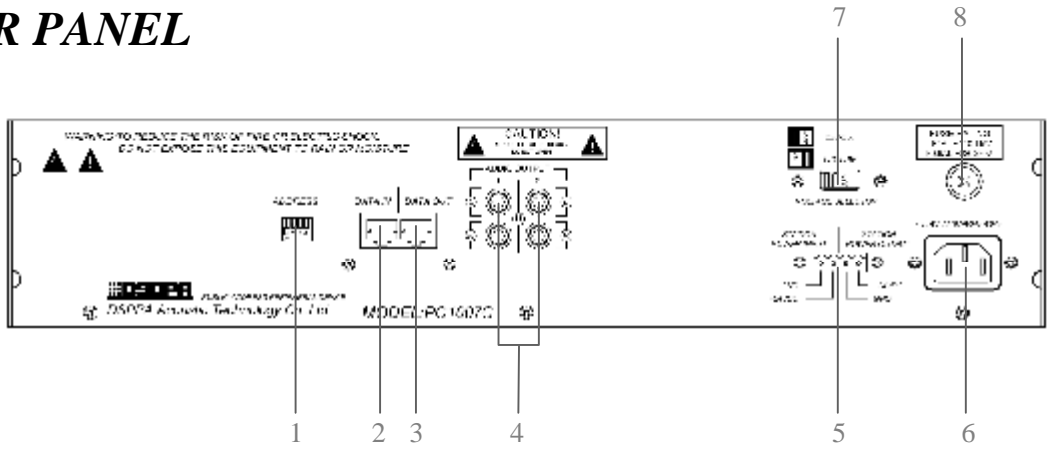 

- |                      |                       |
|----------------------|-----------------------|
| 1 Address switch     | 5 DC 24V input        |
| 2 Remote data input  | 6 AC Power jack       |
| 3 Remote data output | 7 AC 110V/220V Switch |
| 4 Output jack        | 8 AC 110V/220V Fuse   |

# OPERATION

- 1、 Disk Load / Unload** Press key ▲ to open the CD deck put in or take out a disk and then press key ▲ again for resetting the deck.
- 2、 Play in Order** after the deck reset it will play in order automatically. Press key ►, it will play in order too.
- 3、 Option Play** Press ►► or ◀◀ and ◀◀ or ►► while play, we can select any song or any paragraph for play.

- 4、 Play Repeatedly** Press key REPEAT once, it will play the song repeatedly. Presses key REPEAT once again, it will play repeatedly with whole disk. Press key REPEAT the 3rd time for terminating REPEAT.
- 5、 Pause** Press key II while play for pause. Press the key again for releasing. Stop Press key ■ to stop in any time.
- 6、 Stop** Press key ■ to stop in any time.
- 7、 Remote run** This set can be remote controlled by a PC and PC1014T Programmable Timer via a link cord. For this purpose, fit a link cord from the Remote Link port of this set to the link port of the PC. We can use the PC or PC1014T to make programs or timings for this set.

## ***SPECIFICATIONS***

<b>Frequency response</b>	<b>20Hz-20kHz (±3dB)</b>
<b>Signal to Noise Ratio</b>	<b>80dB</b>
<b>THD</b>	<b>0.05%</b>
<b>Wow &amp; Flutter</b>	<b>0.01%</b>
<b>Output level</b>	<b>0dBV</b>
<b>Protection</b>	<b>AC fuse×1 (220V: F0.6AL, 110V: F1AL)</b>
<b>Power Requirement</b>	<b>1. AC220V/110V 50/60Hz 2. DC24V</b>
<b>Outer Packing Size(mm)</b>	<b>(L×W×H) 555×455×185</b>
<b>Unit Size (mm)</b>	<b>(L×W×H) 484×349.5×88</b>
<b>Gross weight</b>	<b>8.7kg</b>
<b>Net weight</b>	<b>6.9kg</b>

Specifications are subject to be changed without notice.

### **CAUTION**

- When the “Power switcher” is off, please pull out the power cord from the socket. Please keep the equipment out of water.
- To reduce the risk of electric shock, do not remove the cover.
- No user parts inside. Refer servicing to qualified service personnel.

DSPPA Acoustic Technology Co., Ltd.