# SCENA LED 200





User's Manual rel 1.2 GB

CE

Le informazioni contenute in questo documento sono state attentamente redatte e controllate. Tuttavia non è assunta alcuna responsabilità per eventuali inesattezze. Tutti i diritti sono riservati e questo documento non può essere copiato, fotocopiato, riprodotto per intero o in parte senza previo consenso scritto della D.T.S . D.T.S. si riserva il diritto di apportare senza preavviso cambiamenti e modifiche

D.T.S. si riserva il diritto di apportare senza preavviso cambiamenti e modifiche estetiche, funzionali o di design a ciascun proprio prodotto. D.T.S non assume alcuna responsabilità sull'uso o sull'applicazione dei prodotti o dei circuiti descritti.

The information contained in this publication has been carefully prepared and checked. However, no responsibility will be taken for any errors. All rights are reserved and this document cannot be copied, photocopied or reproduced, in part or completely, without prior written consent from D.T.S.

D.T.S. reserves the right to make any aesthetic, functional or design modifications to any of its products without prior notice. D.T.S. assumes no responsibility for the use or application of the products or circuits described herein.

Les informations contenues dans le présent manuel ont été rédigées et contrôlées avec le plus grand soin. Nous déclinons toutefois toute responsabilité en cas d'éventuelles inexactitudes. Tous droits réservés. Ce document ne peut être copié, photocopié ou reproduit, dans sa totalité ou partiellement, sans le consentement préalable de D.T.S.

D.T.S. se réserve le droit d'apporter toutes modifications et améliorations esthétiques, fonctionnelles ou de design, sans préavis, à chacun de ses produits. D.T.S. décline toute responsabilité sur l'utilisation ou sur l'application des produits ou des circuits décrits.

Las informaciones contenidas en este documento han sido cuidadosamente redactadas y controladas. Con todo, no se asume ninguna responsabilidad por eventuales inexactitudes. Todos los derechos han sido reservados y este documento no puede ser copiado, fotocopiado o reproducido, total o parcialmente, sin previa autorización escrita de D.T.S.

D.T.S. se reserva el derecho a aportar sin previo aviso cambios y modificaciones de carácter estético, funcional o de diseño a cada producto suyo. D.T.S. no se asume responsabilidad de ningún tipo sobre la utilización o sobre la aplicación de los productos o de los circuitos descritos.

# **INDEX:**

1- SYMBOLS	
2- GENERAL WARNING	
3- GENERAL WARRANTY CONDITIONS	
4- TECHNICAL FEATURES	5
5- ACCESSORIES	6
6- IMPORTANT SAFETY INFORMATION	7
6.1 Fire prevention	
6.2 Prevention of electric shock	
6.3 Safety	7
6.4 Waste Electrical and Electronic Equipment directive	
7- INSTALLATION	8
8- INPUT / OUTPUT CONNECTIONS	9
9- DMX SIGNAL CONNECTION	10
9.1 DMX Addresses	11
9.2 Selecting the DMX address	11
10- RDM FUNCTIONS	12
11- FIRMWARE UPDATING	
12- DISPLAY FUNCTIONS	
13- MANUAL MODE	
14- ERROR MESSAGES	15 16
15- DIVIA PROTOCOL	16

#### 1- SYMBOLS

Graphic symbols used on this manual:



THIS SYMBOL INDICATES A HOT SURFACE



THIS SYMBOL INDICATES ELECTRIC SHOCK RISK



THIS SYMBOL INDICATES GENERAL RISK

t<sub>a</sub> 40°C

THIS SYMBOL INDICATES THE MAXIMUM OPERATING AMBIENT TEMPERATURE



THIS SYMBOL MEANS "DO NOT STARE AT THE OPERATING LIGHT SOURCE"



THIS SYMBOL INDICATES PHOTOBIOLOGICAL SAFETY



THIS SYMBOL INDICATES THE EUROPEAN COMMUNITY DIRECTIVE 2012/19/EC ON WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT (WEEE)

### **2- GENERAL WARNING**

Read the instruction contained in this user manual carefully, as they give important information regarding safety during installation, use and maintenance.

The unit is not for residential use and must be installed by a qualified electrician or experienced person.

Always disconnect the device from the mains before maintenance.

The device must always be equipped with an efficient ground connection.

## **3- GENERAL WARRANTY CONDITIONS**

The unit is guaranteed for 36 months from the date of purchase against manufacturing material defects.

## **4- TECHNICAL FEATURES**

#### **OVERVIEW**

SCENA LED 200 is a high-power, compact, lightweight LED projector suitable for TV studios, theatres, museums, exhibitions, events.

SCENA LED 200 is the most up-to-date alternative to conventional lights, offering technical features that dramatically improve light quality and flexibility of use: CRI>95, flicker-free projection, DMX-RDM remote control, noiseless operation, virtually zero maintenance costs, lower power consumption.

SCENA LED 200 is contained in a strong housing with folded edges, designed to withstand a continuous use.

#### **DTS Product codes:**

03.TS046.46.F SCENA LED 200 FR 3000K SCENA LED 200 FR 4000K SCENA LED 200 FR 5600K SCENA LED 200 FR 5600K

## **LED Technology**

Single high-power WHITE LED 3000K CRI>95 15000 Lumens Also available with 4000K and 5600K LEDs

### Optical group

Ø 150 mm Fresnel lens 6,5° - 70° linear zoom

#### Control

DMX 512 / RDM 4 DMX channels (Default) or 1 DMX channel 4-digit 7-segment LED display + 4 soft keys

#### **Power supply**

Full-range 100-240Vac 50-60 Hz

Consumption: 200W Max

#### Connections

Power supply: PowerCON TRUE1 In&Out panel connectors

DMX: XLR 5 pins In&Out panel connectors

### Operating ambient temperature

-10° / 40°

## Weight

8,1 Kg


#### Certifications

2014/35/UE; 2014/30/UE IEC 62471; IEC 695-2-1

 $\epsilon$ 

EN 60598-1; EN 62471; EN 61347-2-13 EN 60598-2-17; EN 55015 EMC; EN 61347-1

## **DIMENSIONS**

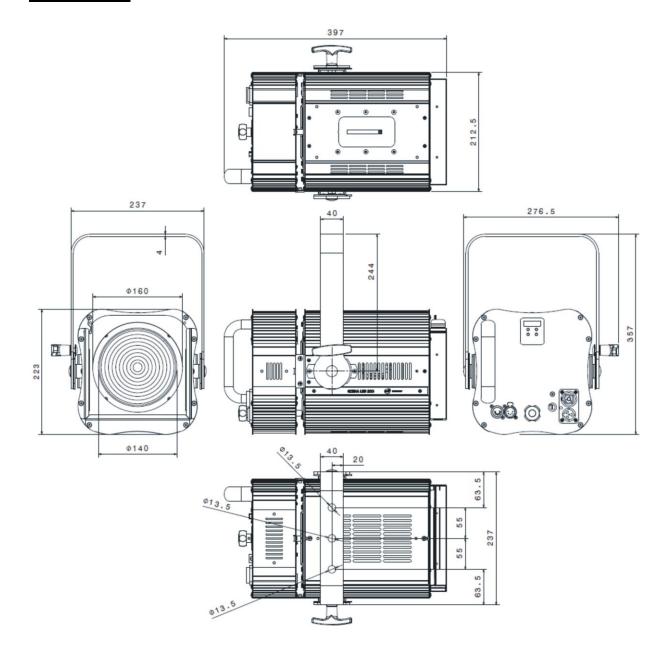

## **5- ACCESSORIES**

## As standard

- 1 x PowerCON TRUE1 female cable connector (DTS Code 0520P066)
- 1 x XLR 5 pins female cable connector (DTS Code 0508B147)
- 1 x XLR 5 pins male cable connector (DTS Code 0508B148)
- 1 x Filterframe black finishing (already installed on the projector) (DTS Code 02M093278.46)
- 1 x User's Manual

## **Optional (on request)**

- Barndoor black finishing (DTS Code 03.TBD02)
- "C" Clamp G60 (Max. Load 50 Kg) (DTS Code 0521A004)
- Safety cable 3 mm x 60 cm, max capacity load 60 Kg (DTS Code 0521A010)

### 6- IMPORTANT SAFETY INFORMATION

### **6.1 Fire prevention:**

Replace any blown or damaged fuses only with those of identical value: T 3.15A 250V.

## 6.2 Prevention from electric shock:



High voltage is present inside the unit. Unplug the unit prior to performing any operation which involves touching the inside of the unit.

This equipment must be grounded, do not connect to non-grounded supplies. The use of a thermal magnetic circuit breaker is recommended for each SCENA LED 200 unit. Use only AC supplies 100-240V 50-60 Hz.

SCENA LED 200 should never be located in position exposed to rain or in areas of extreme humidity.

A good air ventilation is essential for proper equipment work.

# 6.3 Safety:



Risk Group 2 product according to EN 62471. Risk Group 2

CAUTION. Do not look directly into the light output. May be harmful to the eyes and skin.

Do not stare at the operating light source.

The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.

The unit is not for household use and must be installed by a qualified electrician or experienced person.

The external surface of the unit may exeed 60°C; never handle the unit until at least 5 minutes have elapsed since the unit was turned off.

Never install the unit in an enclosed area lacking sufficient air flow.

The ambient temperature should not exeed 40°C. ta 40°C

# 6.4 Waste Electrical and Electronic equipment (WEEE) directive:



The unit, accessories and packaging should be sorted for environmetal-friendly recycling.

For EC countries: according to the European Directive 2012/19/EC for Waste Electrical and Electronic Equipment and its implementation into national right, luminaires that are no longer usable must be collected separately and disposed of in an environmentally correct manner.

## **7-INSTALLATION**

The unit is suitable for dry locations only.


SCENA LED 200 can be installed on a truss or on the ceiling.

It is recommend the use of appropriate clamps to fix the unit to the mounting surface.


## **ATTENTION:**

A safety cable (code 0521A010) must be securely fixed to the unit's mounting bracket and to the support structure of the projector as shown in the picture below.

Fixing clamps and safety cable are available on request.

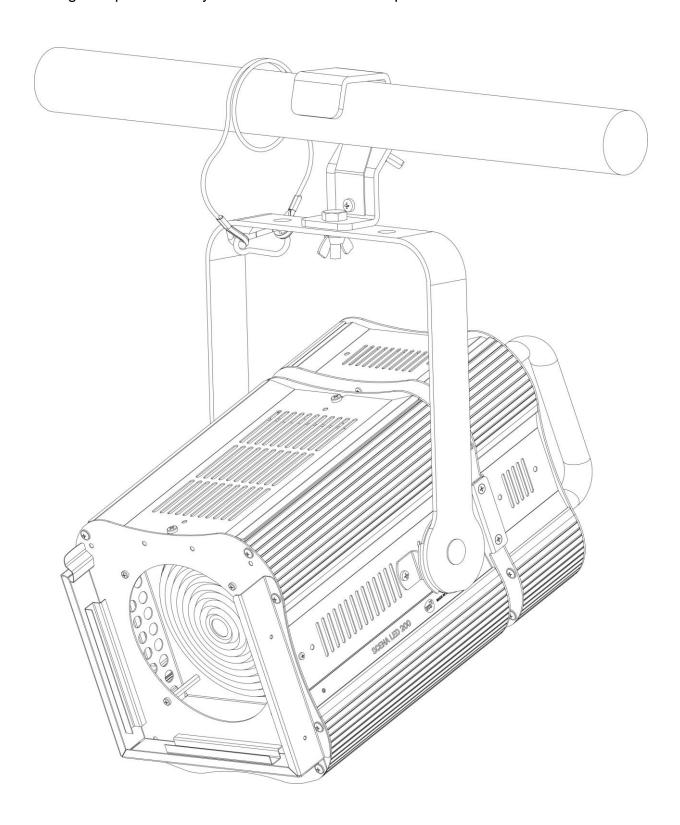

## 8- INPUT / OUTPUT CONNECTIONS

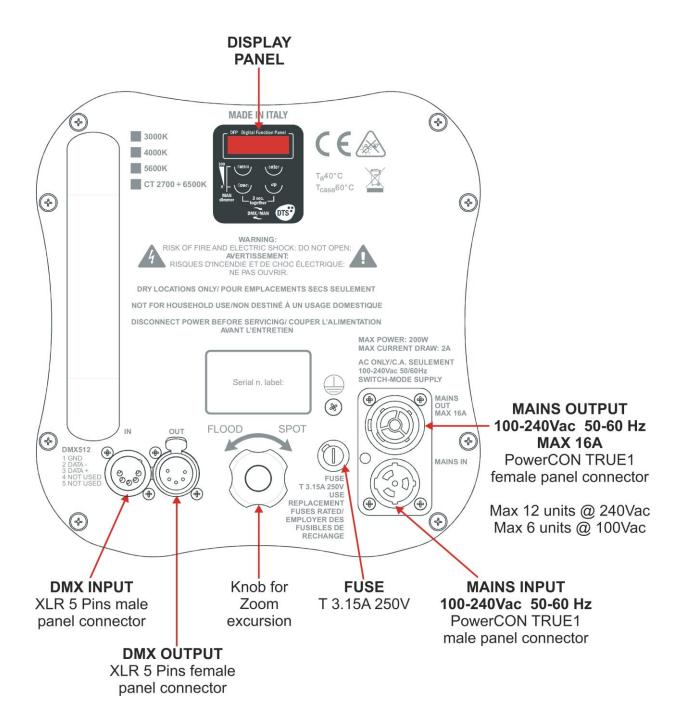

## 9- DMX SIGNAL CONNECTION:

The unit operates using a digital DMX 512 signal.


Connection between the controller and the unit or between units must be carried out using a two pair screened Ø 0.5 mm.

Ensure that the conductors do not touch each other.

Do not connect the cable ground to the DMX connector chassis.

The plug housing must be isolated. Connect the mixer signal to the DMX IN projector plug and connect it to the next projector by connecting the DMX OUT plug on the first unit to the DMX IN plug of the second one.

In this way, all the projectors are cascade connected.

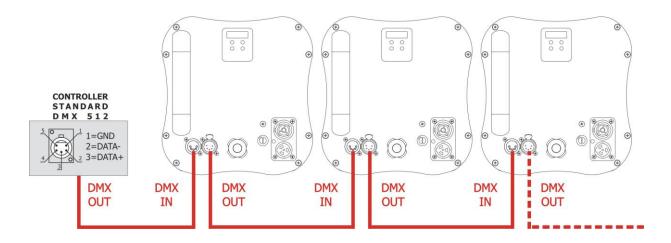


If the display showing the DMX address flashes, then one of the following errors has occurred:

- DMX signal not present
- DMX reception problem


For Installations where long distance DMX cable connections are needed, we suggest to use a DMX terminator.

The DMX terminator is a male XLR 3-5 pins connector with a 120 ohm resistor Between pin 2 and 3.

The DMX terminator must be plugged into the last unit (DMX out panel connector) of the DMX line.



PLACE A 120 OHM RESISTOR BETWEEN PIN 2 AND 3 OF A MALE XRL CONNECTOR AND PLUG IT INTO THE DMX OUT PANEL CONNECTOR OF THE LAST UNIT CONNECTED TO THE DMX LINE

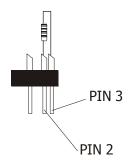

## 9.1 DMX addresses

SCENA LED 200 can be controlled with 4 DMX channels (Default) or 1 DMX channel. In order to use the unit in 4 DMX channels mode (Default), set the following addresses on the mixer:

Projector 1 A001
Projector 2 A005
Projector 3 A009
.... A....
projector 6 A021

If you want to select the next projector, just add "4"

## 9.2 Selecting the DMX address

- 1) Press the UP-DOWN key until you reach the required DMX address. The numbers on the display will start to flash (but the new DMX address hasn't yet been set).
- 2) Press ENTER to confirm your selection. The numbers on the display will stop flashing and the projector is now controlled by the new DMX address.

TIPS: if you keep pushed the UP or DOWN keys, the channels are calculated more quickly and you get a faster selection.

2) Press ENTER to confirm your selection. The numbers on the display will stop flashing and the projector is now controlled by the new DMX address.

# **10- RDM FUNCTIONS**

By using a RDM controller it is possible to set DMX address, DMX mode and other parameters.

SCENA LED 200 accepts the following RDM commands:

DE: //OF 15150		
DEVICE_INFO	To read the following parameters:	
	RDM protocol version	
	Fixture model ID	
	Fixture type	
	Software version ID	
	DMX channels	
	DMX mode	
	DMX address	
	Total sub-fixtures	
	Total sensors	
IDENTIFY_DEVICE	LED ON at max power to identify the fixture	
DMX_START_ADDRESS	To read / set the DMX address	
SOFTWARE_VERSION_LABEL	Software version ID	
SUPPORTED_PARAMETERS	List of all supported parameters	
PARAMETER_DESCRIPTION	Description / details of Manufacturer Specific	
	parameter as "NO DMX ACTION"	
DMX_PERSONALITY	To set the DMX mode	
DMX_PERSONALITY_DESCRIPTION		
DEVICE_MODEL_DESCRIPTION	Description / details of the Fixture model	
MANUFACTURER_LABEL	Producer ID	
SENSOR_DEFINITION, SENSOR VALUE	Description / values of sensors	
SE	NSORS	
1: Led Temperature	LED temperature	
2: Micro Temperature	Micro controller temperature	
3: Driver 1 Temperature	Output 1 of LED Driver board temperature	
4: Driver 2 Temperature	Output 4 of LED Driver board temperature	
	TURER-SPECIFIC PIDs	
NO DMX ACTION	To set the desired fixture's behavior in case DMX	
	signal is missing or not available.	
	1 = Black-out	
	2 = LED ON @ 60%	
	3 = LED ON @ 100%	
	4 = CUSTOM (Dimmer level selectable)	
	NO DMX LEVEL	
	0 ÷ 255 (Default = 0)	
	5 = Keep last valid DMX signal (Default)	

### 11- FIRMWARE UPDATING

To update the software version of the SCENA LED 200 you need:

- DTS RED BOX interface (DTS Code 03.LA.008).
- USB-DMX Driver for the DTS RED BOX interface.
- "DTS Firmware Upgrade Utility v.2.02" program installed on PC.
- Latest firmware release available for SCENA LED 200 unit.


## Updating the software version.

Please follow the procedure below to perform the update:

- 1. Install the DTS RED BOX USB-DMX driver on the PC you will use to update the unit software.
- 2. Connect the DTS RED BOX interface to a spare USB port on the PC (be sure that internal switch on DTS RED BOX is set to COM).
- 3. Connect the unit DMX input to the DTS RED BOX DMX output with a standard DMX cable and turn ON the unit.
- 4. Send the new software version into the unit by using "DTS Firmware upgrade Utility v.2.02" program. At the end of the procedure, the unit will reset.

## **12- DISPLAY FUNCTIONS**

The SCENA LED 200 display panel shows all the available control menus. Using these options, it is possible to change the fixture's setting. Changing the DTS settings can vary the functions of the unit so that it does not respond to the DMX 512 used to control it. Carefully follow the instructions below before carrying out any variations or selections.

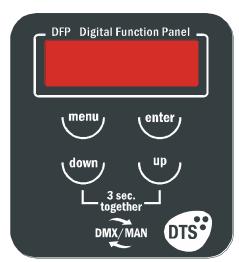

MENU	<ul> <li>To access the control menus in the display panel.</li> <li>To return to the previous level in the menu structure without making a change.</li> </ul>	
	To exit the menus.	
ENTER	<ul> <li>To select any required menu.</li> </ul>	
	<ul> <li>To confirm any changes.</li> </ul>	
UP / DOWN	<ul> <li>To navigate the menus structure.</li> </ul>	
	<ul> <li>To change any value.</li> </ul>	

Eirmwaro rologeo	1 00	
FILLIWALE LEIGASE	1.00	

MAIN MENU	LEVEL 1	LEVEL 2	LEVEL 3	FUNCTION
d15P	Po5 I	88		Display normal orientation for floor mounting position (Default)
		88		Display inverted orientation for suspended mounting position
	5669	oFF		Display always ON (Default)
	2602	<u> </u>		Display goes OFF after 10 seconds
NodE	4 cH	0.,		Allows to select 4 DMX channels mode (Default)
				Allows to select 1 DMX channel
LEd	50EH	oFF-20		Mode Allows to select the value of the
LCO				delay (in milliseconds) for Dimmer channel reaction to DMX or Program variation.  Off = Instant response to DMX variation. 4 = 100 ms Smooth response to DMX variation (Default) 20 = 500 ms Smooth response to DMX variation.
	coNP	9 u R d		Allows to select Quadratic current for linear light output (Default)
		LΙσΕ		Allows to select Linear current output
	5ync	6 IO-5000		Allows to adjust the PWM frequency value (Hz) in order to reduce flickering in the process of your camera recordings.  Default = 610 Hz
	65E	on		Allows to increase the LED's
	036	J.,		current from 1470mA to 2100mA  Default = ON
		oFF		
Ruto	SurE			Automatic mode without DMX controller. In Auto mode the unit do generate DMX for slave units.
		9100	0-255	Dimmer level selectable by user as on DMX channel 2 (DIMMER)  Default = 255
		SHuE	0-255	Shutter level selectable by user as on DMX channel 1 (SHUTTER)  Default = 0
		<u> </u>		Esc from automatic mode menu
SLAU	SurE	5LU		Slave mode. The unit is forced to DMX address 1 and 7 DMX channels mode receiving signal from the unit set in Auto mode.
		E5c		Esc from slave mode
FAn	<u>5</u> Ed			Allows to select the internal fans speed.
	SIL			Standard mode: High fans speed. Silent mode: Low fans speed for a very low noise operation.  Default = SIL
ndΠH				No DMX action.  Keep last valid DMX signal  (Default)
	<u> </u>			LED ON @ 60% LED ON @ 100%
	<u> </u>	0 355		Dimmer level selectable for White
	cu5t	0-255		Default = 255
	oFF			Black-out

MAIN MENU	LEVEL 1	LEVEL 2	LEVEL 3	FUNCTION
dF5E	SurE			To restore default settings
LENP	7	0.25.0		LED temperature monitoring
		025.0		Micro controller temperature monitoring
	d-U	025.0		Output 1 of LED Driver board temperature monitoring
	drU2	025.0		Output 4 of LED Driver board temperature monitoring
FIUE	LE d			Shows the total unit life time and LED life time
	unib			222
5 <sub>0</sub> F <sub>E</sub>	u. 1 <u>.0</u> 0			Software version

## **13- MANUAL MODE**

Manual mode can be activated by pressing at the same time 'UP' and 'DOWN' keys on unit display for 3 seconds (A001).

In Manual mode it is possible to select the DIMMER level (range 0-255) as on DMX channel 2 and SHUTTER level (range 0-255) as on DMX channel 1.

When Manual mode is active, unit switch OFF/ON cycle will maintain Manual Mode selection.

In Manual mode the DMX signal is ignored.

## **14- ERROR MESSAGES**

EDDOD SHOWED ON DISDLAY	APPEARS WHEN
ERROR SHOWED ON DISPLAY	111 1 111 1 1 1 1 1 1 1 1 1 1 1 1 1
LEd SEnSor Error	LED thermal sensor damaged (open or in
	short circuit).
	Unit immediately goes in black-out.
LEd ouErtENPErRturE	LED temperature detected over 100°C.
	Unit immediately goes in black-out.
Nicro SEnSor Error	Micro controller thermal sensor damaged
	(open or in short circuit).
	Unit immediately goes in black-out.
Nicro ouErtENPErRturE	Micro controller temperature detected over
	100°C.
	Unit immediately goes in black-out.
dru i SenSor Error	Thermal sensor on output 1 of LED Driver
	board damaged (open or in short circuit).
	Unit immediately goes in black-out.
drU I ouErtENPErAturE	Temperature detected over 100°C on
	output 1 of LED Driver board.
	Unit immediately goes in black-out.
drU2 5En5or Error	Thermal sensor on output 4 of LED Driver
	board damaged (open or in short circuit).
	Unit immediately goes in black-out.
drU2 ouErtENPErAturE	Temperature detected over 100°C on
	output 4 of LED Driver board.
	Unit immediately goes in black-out.

# 15- DMX PROTOCOL

# 4 CHANNELS MODE (Default)

- 1 SHUTTER
- 2 DIMMER
- 3 DIMMER FINE
- 4 FUNCTIONS

Ch	Name	DMX levels	
1	SHUTTER	09	Black-out
		1019	Open
		2029	Black-out
		30119	Strobe (from 3,27 s to 30 ms)
		120149	Pulse up (from 42,6 s to 120 ms)
		150179	Pulse down (from 42,6 s to 120 ms)
		180229	Random strobe
		230235	Single flash 30 ms
		236255	Open
2	DIMMER	0255	Proportional dimmer from min to max
3	DIMMER FINE	0255	Proportional dimmer from min to max
4	FUNCTIONS (staying on desired	014	No function
	option for 5 seconds)	1524	SMOOTH OFF
		2526	SMOOTH 1 (25 ms)
		2728	SMOOTH 2 (50 ms)
		2930	SMOOTH 3 (75 ms)
		3132	SMOOTH 4 (100 ms) (DEFAULT)
		3334	SMOOTH 5 (125 ms)
		3536	SMOOTH 6 (150 ms)
		3738	SMOOTH 7 (175 ms)
		3940	SMOOTH 8 (200 ms)
		4142	SMOOTH 9 (225 ms)
		4344	SMOOTH 10 (250 ms)
		4546	SMOOTH 11 (275 ms)
		4748	SMOOTH 12 (300 ms)
		4950	SMOOTH 13 (325 ms)
		5152	SMOOTH 14 (350 ms)
		5354	SMOOTH 15 (375 ms)
		5556	SMOOTH 16 (400 ms)
		5758	SMOOTH 17 (425 ms)
		5960	SMOOTH 18 (450 ms)
		6162	SMOOTH 19 (475 ms)
		6364	SMOOTH 20 (500 ms)
		6574	GAMMA CORRECTION (COTP) QUADRATIC (DEFAULT)
		7584	GAMMA CORRECTION ( <i>coΠP</i> ) LINEAR

Ch	Name	DMX levels		
4	FUNCTIONS	85104	OUTPUT FREQUENCY 610 Hz (DEFAULT)	
	(staying on desired option for 5 seconds)	105	OUTPUT FREQUENCY 800 Hz	
		106	OUTPUT FREQUENCY 1000 Hz	
		107	OUTPUT FREQUENCY 1500 Hz	
		108	OUTPUT FREQUENCY 2000 Hz	
		109	OUTPUT FREQUENCY 2500 Hz	
		110	OUTPUT FREQUENCY 3000 Hz	
		111	OUTPUT FREQUENCY 3500 Hz	
		112	OUTPUT FREQUENCY 4000 Hz	
		113	OUTPUT FREQUENCY 4500 Hz	
		114	OUTPUT FREQUENCY 5000 Hz	
		115134	RESERVED	
		135144	BOOST ON (DEFAULT)	
		145154	BOOST OFF	
		155164	DISPLAY STAND-BY OFF (DEFAULT)	
		165174	DISPLAY STAND-BY ON	
		175176	NO DMX ACTION – KEEP LAST DMX (DEFAULT)	
		177178	NO DMX ACTION – Black-out	
		179180	NO DMX ACTION – LED ON @ 100%	
		181182	NO DMX ACTION – LED ON @ 60%	
		183184	NO DMX ACTION – CUSTOM	
		185194	RESERVED	
		195204	RESERVED	
		205214	RESERVED	
		215224	RESERVED	
		225234	RESERVED	
		235244	FAN STANDARD MODE	
		245255	FAN SILENT MODE (DEFAULT)	

# 1 CHANNEL MODE

# 1 DIMMER

Ch	Name	DMX levels	
1	DIMMER	0255 Proportional dimmer from min to max	

# **NOTES**

# **NOTES**

The information contained in this publication has been carefully prepared and checked. However, no responsibility will be taken for any errors. All rights are reserved and this document cannot be copied, photocopied or reproduced, in part or completely, without prior written consent from DTS.

DTS reserves the right to make any aesthetic, functional or design modifications to any of its products without prior notice. DTS assumes no responsibility for the use or application of the products or circuits described herein.



## **DESIGNED TO SHINE**

## ISO 9001:2008 DTS quality system

is certified to the ISO 9001:2008 standard



DTS products are designed and manufactured at the DTS plants in Italy

