



Gefentv[®]

1:8 Multi Format

Video Distribution over Ethernet

GTV-MFDA-148

User's Manual

www.gefentv.com

ASKING FOR ASSISTANCE

Technical Support:

Telephone (818) 772-9100
(800) 545-6900

Fax (818) 772-9120

Technical Support Hours:

8:00 AM to 5:00 PM Monday thru Friday.

Write To:

Gefen LLC
c/o Customer Service
20600 Nordhoff St
Chatsworth, CA 91311

www.gefentv.com
support@gefentv.com

Notice

Gefen LLC reserves the right to make changes in the hardware, packaging and any accompanying documentation without prior written notice.

1:8 Multi Format Video Distribution Amplifier over Ethernet
is a trademark of Gefen LLC

© 2010 Gefen LLC, All Rights Reserved
All trademarks are the property of their respective companies

Rev XB

CONTENTS

1	Introduction
2	Operation Notes
3	Features
4	Sender Panel Layout
5	Sender Panel Descriptions
6	Receiver Panel Layout
7	Receiver Panel Descriptions
8	Connecting and Operating The Unit
8	Distribution of Video and Audio over CAT-5
9	Distribution of Video and Audio over LAN
10	Operation As a Switch
11	Wiring Diagrams
12	I/R Backchannel Configuration
13	Video Input and Output Format Conversion Table
14	Specifications
15	Warranty

INTRODUCTION

Congratulations on your purchase of the 1:8 Multi Format Video Distribution over Ethernet. Your complete satisfaction is very important to us.

GefenTV

GefenTV is a unique product line catering to the growing needs for innovative home theater solutions. We specialize in total integration for your home theater, while also focusing on going above and beyond customer expectations to ensure you get the most from your hardware. We invite you to explore our distinct product line and hope you find your solutions. Don't see what you are looking for here? Please call us so we can better assist you with your particular needs.

The GefenTV 1:8 Multi Format Video Distribution Amplifier over Ethernet

This versatile product is useful for PCs, digital signage applications, and educational institutions. VGA, Component, S-Video, or Composite video data is broadcast from the Sender up to 330 ft over CAT-5 to the Receiver. The Receiver provides VGA or Component output and can be daisy-chained. Additional features of this product allow video and audio distribution over a Local Area Network (LAN).

How It Works

The GefenTV 1:8 Multi Format Video Distribution Amplifier over Ethernet is a Sender/Receiver system allowing broadcast of analog video and audio over Ethernet cable to a maximum of eight (8) Receivers. Distribution of video and audio over LAN can also be achieved by connecting a single Ethernet cable from the Sender unit to a LAN connection. See page 9 for details.

OPERATION NOTES

READ THESE NOTES BEFORE INSTALLING OR OPERATING THE 1:8 MULTI FORMAT VIDEO DISTRIBUTION AMPLIFIER OVER ETHERNET

This product behaves like a switch and can be used in the following ways:

1. Extend video and audio connected from the Sender to the Receiver up to 330 ft (100m) using CAT-5.
2. Broadcast video and audio over LAN, by connecting the Sender to the Local Area Network (LAN). Once the receiver is connected to the same LAN, it will automatically link to the Sender.
 - The 1:8 Multi Format Video Distribution Amplifier Over Ethernet can be used in any LAN.
 - This product conforms to IEEE 802.3 standards.
 - Receivers cannot be used outside of the LAN.
 - Only one Ethernet cable is required to be connected from the Sender to the LAN.

FEATURES

Features


- Maximum Input Resolutions: 1080p@60Hz (Component), 1280x1024@60Hz (VGA), 480i@60Hz, 576i@50Hz (S-Video, Composite)
- Maximum Output Resolutions: 720p@60Hz (Component), 1280x1024@60Hz (VGA), 480i@60Hz, 576i@50Hz (S-Video, Composite)
- Switch between four audio/video sources from the Sender location
- Plug-and-Play installation (with no special hardware or software configuration required)
- 2-Channel Stereo Analog Audio supported
- Extend video and audio up to 330 ft (100m) using CAT-5.
- PCM Encoding is 48KHz 16-bit sampling

Package Includes


- (1) GefenTV 1:8 Multi-Format Sender
- (1) GefenTV 1:8 Multi Format Receiver
- (1) 6 ft VGA Cable (M-M)
- (2) 12V DC Power Supplies
- (1) User's Manual

SENDER PANEL LAYOUT


Top Panel

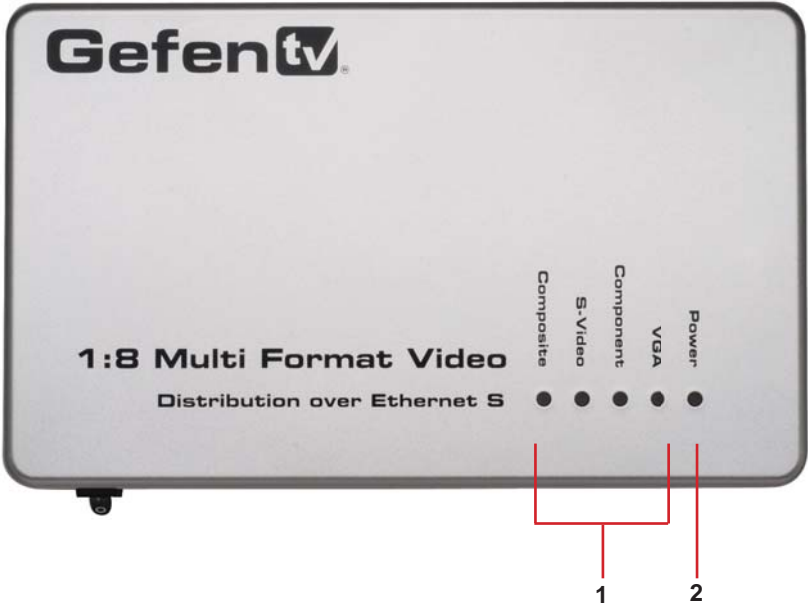

Front Panel

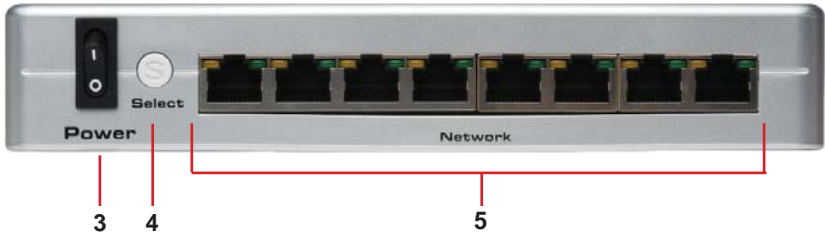

Back Panel

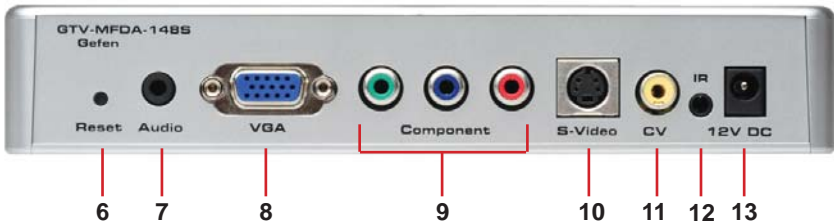


SENDER PANEL DESCRIPTIONS

- 1 Input Selection Indicators**
Indicates the current input selection: Composite, S-Video, Component, or VGA
- 2 Power Indicator**
This LED will glow blue when the power is on.
- 3 Power On/Off Switch**
Turn the power on or off using this button
- 4 Selector Button**
Switches between Component Video, S-Video, Composite and VGA
- 5 Ethernet (RJ-45) Input Connectors**
Use this jack point to connect another receiver into the system
- 6 Reset Button**
Reset the sender unit
- 7 Analog Stereo Audio Input**
Use this input to connect a 3.5mm analog stereo audio line-in jack
- 8 VGA Video Input**
Use this input to connect a VGA video input from a computer source
- 9 Component Video Inputs**
Use this input to connect an Analog RCA Component
- 10 S-Video Input**
Use this input to connect S-Video sources
- 11 Composite Video Input**
Use this input to connect Composite video
- 12 I/R Back-Channel Port**
Use this port to connect an I/R blaster cable (Gefen Part No. EXT-2IREMIT, not included)
- 13 12V DC Power Receptacle**
Used to connect the included 12V DC power supply

RECEIVER PANEL LAYOUT


Top Panel

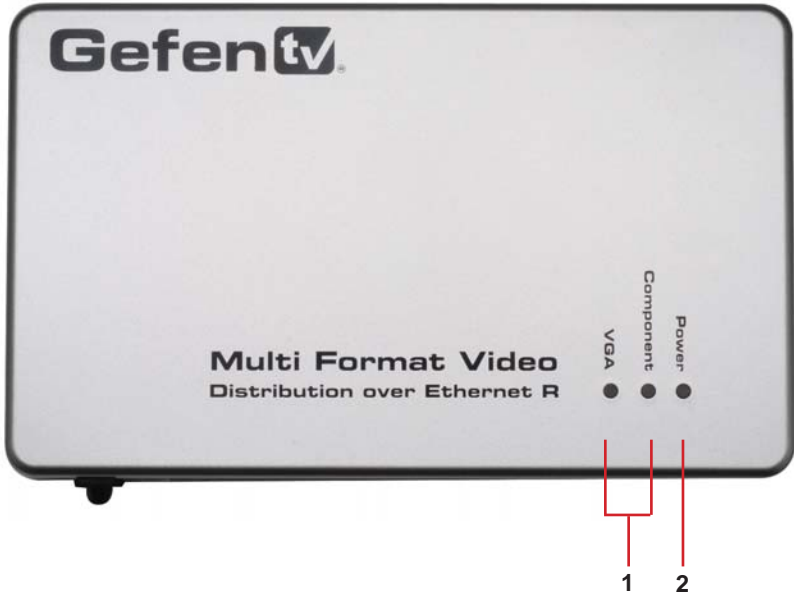

Front Panel



Back Panel

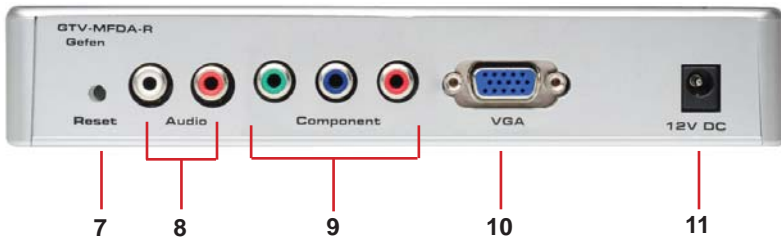

RECEIVER PANEL DESCRIPTIONS

- 1 Output Selection Indicator**
Indicates the current output selection: Component or VGA
- 2 Power Indicator**
This LED will glow blue when the Receiver is powered on
- 3 Power On/Off Switch**
Turn the power on or off using this button
- 4 Selector Button**
Switches between Component or VGA output
- 5 I/R Sensor**
Infrared lens senses signals from remote control
- 6 Ethernet (RJ-45) Output Connectors**
Use this input to connect Ethernet cables
- 7 Reset Button**
Resets the receiver unit
- 8 Analog Stereo Audio Output**
Connect a stereo RCA cable to these outputs.
- 9 Component Video Output**
Use this input to connect component video
- 10 VGA Output Connector**
Use this to connect analog VGA displays
- 11 12V DC Power Receptacle**
Used to connect the included 12V DC power supply

CONNECTING AND OPERATING THE 1:8 MULTI FORMAT VIDEO DISTRIBUTION AMPLIFIER OVER ETHERNET

How to Connect the GefenTV 1:8 Multi Format Video Distribution Amplifier over Ethernet (Direct Connection using Sender and Receiver)

1. Connect the source(s) to the Sender unit using VGA, Component, Composite or S-Video cables. If audio is desired on the output, connect a 3.5mm mini stereo audio cable to the rear of the Sender unit. Connect the other end of the audio cable to the audio source.
2. Connect the Receiver to the display using a VGA and/or a Component cable.
3. Attach one end of an Ethernet cable from the Sender unit to each Receiver. The Ethernet cable(s) connecting the Sender to the Receiver should be no longer than 100 meters (330 feet) in length.
4. Using one of the included 12V DC power supplies, connect it to the power receptacle at the rear of the Sender unit. Connect the power adapter to an available wall outlet.
5. Connect the other 12V DC power supply to the Receiver unit then plug the adapter into an available wall outlet.
6. Use the SELECT button on the Sender unit (page 4) to select the desired input video source. Pressing the SELECT button on the Sender will cycle through each input on the Sender. The LED next to the selected output will be displayed on the Input Selection Indicator (page 4).
7. Use the SELECT button on the Receiver unit (page 6) to select between VGA or Component output. The LED next to the selected output will be displayed on the Output Selection Indicator (page 6).
8. Once the correct video input and output selections are made, video will appear on the connected display. If audio is used on the Sender and Receiver, audio should be heard clearly through the display.

Note: The maximum supported input and output resolution for VGA is 1280x1024 @ 60Hz. YPbPr (Component) output supports a maximum of 720p @ 60Hz.

CONNECTING AND OPERATING THE 1:8 MULTI FORMAT VIDEO DISTRIBUTION AMPLIFIER OVER ETHERNET

Configuring the GefenTV 1:8 Multi Format Distribution Over Ethernet for Video / Audio over LAN

In addition to extending video and audio over Ethernet, the GefenTV 1:8 Multi Format Distribution Over Ethernet can be used to distribute Video and Audio over a Local Area Network (LAN).

1. Connect the source(s) to the Sender unit using VGA, Component, Composite or S-Video cables. If audio is desired on the output, connect a 3.5mm mini stereo audio cable to the rear of the Sender unit (page 4). Connect the other end of the audio cable to the audio source.
2. Connect an Ethernet cable from the Local Area Network to one of the Ethernet jacks on the front of the Sender.
3. Connect the Receiver to a display using VGA and/or Component cables.
4. Connect an Ethernet cable from the Local Area Network to one of the Ethernet jacks on the front of the Receiver.
5. Using one of the included 12V DC power supplies, connect it to the power receptacle at the rear of the Sender unit. Connect the power adapter to an available wall outlet.
6. Connect the other 12V DC power supply to the Receiver unit then plug the adapter into an available wall outlet.
7. Use the SELECT button on the Sender unit (page 4) to select the desired input video source. Pressing the SELECT button on the Sender will cycle through each input on the Sender. The LED next to the selected output will be displayed on the Input Selection Indicator (page 4).
8. Use the SELECT button on the Receiver unit (page 6) to select between VGA or Component output. The LED next to the selected output will be displayed on the Output Selection Indicator (page 6).
9. Once the correct video input and output selections are made, video should appear on the connected display. If audio is used on the Sender and Receiver, audio should be heard clearly through the display speakers.

CONNECTING AND OPERATING THE 1:8 MULTI FORMAT VIDEO DISTRIBUTION AMPLIFIER OVER ETHERNET

Connecting additional computers using the GefenTV 1:8 Multi Format Video Distribution Amplifier over Ethernet


In addition to distribution video and audio over LAN, computers can also be connected within the network.

1. Follow the steps on page 9 for *Configuring the GefenTV 1:8 Multi Format Distribution Over Ethernet for Video / Audio over LAN*.
2. Using an Ethernet cable, connect each computer to either the Sender or Receiver unit. The Sender functions as a switch and it is possible to connect multiple computers or Receiver units.
3. The computers connected to the Sender or Receiver should now be able to access the LAN without any additional configuration. It should be noted that connecting computers to the Sender will minimize the number of Receivers that can be used with the Sender.


NOTE: The GefenTV 1:8 Multi Format Video Distribution Amplifier over Ethernet can operate independently of an Ethernet switch. However, when configuring for video / audio and computers over LAN, it is suggested that an IGMP switch be used to manage the video / audio data and computer data. This will ensure the correct data is sent to the proper port and maintain optimal bandwidth.

CONNECTING AND OPERATING THE 1:8 MULTI FORMAT VIDEO DISTRIBUTION AMPLIFIER OVER ETHERNET

Wiring Diagram for connecting directly using CAT-5:

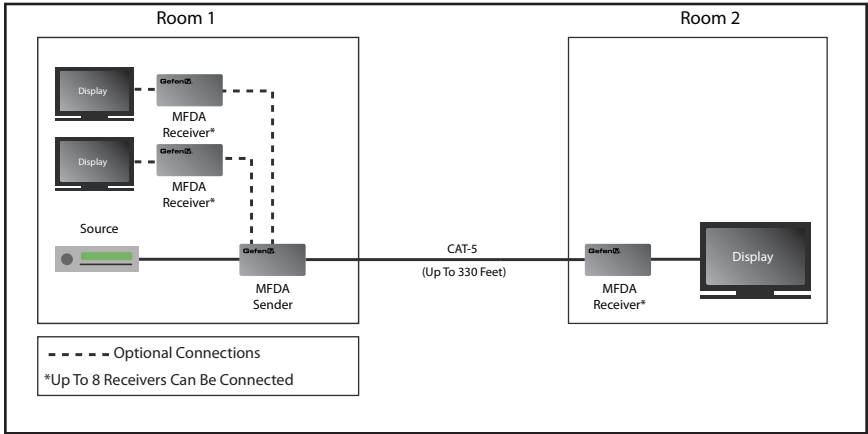

Wiring Diagram for connecting over LAN using CAT-5:

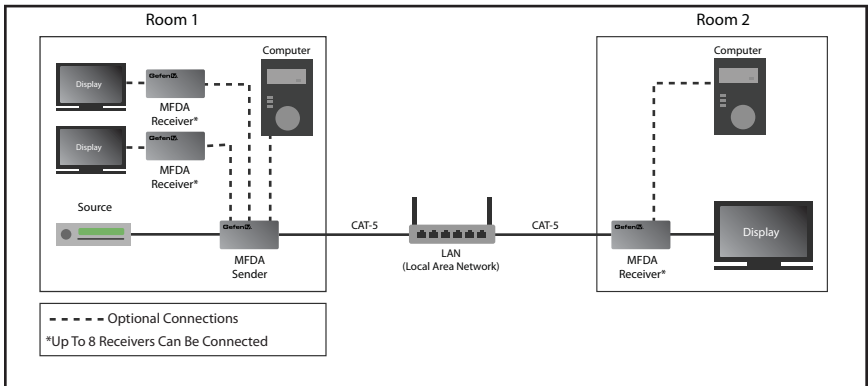

I/R BACKCHANNEL CONFIGURATION


Controlling devices using the I/R Backchannel

On the rear of the Sender unit is the I/R backchannel port (see page 4, item 12). I/R commands that are received through the I/R receiver (see page 6, item 5) will be transmitted back to the source for output through the attached I/R backchannel. The I/R backchannel uses an infrared emitter referred to as an “I/R Blaster” (Gefen Part No. EXT-2IREMIT, not included).

1. Connect the 3.5mm jack of the I/R Blaster cable to the rear of the Sender unit (see page 4).
2. Place the I/R emitter over the I/R sensor of the source.

To control the source, direct the source remote at the Receiver unit as shown in **Fig. 1.1**. The I/R commands from the source remote are transmitted over the CAT-5 and relayed to the source. In a LAN application, devices in different rooms (or floors) can be controlled as long as the Sender and Receiver are connected to the same network. The I/R Backchannel can greatly increase the flexibility when controlling the source, particularly at great distances.

Fig. 1.1: Controlling the source remotely, using an I/R Blaster

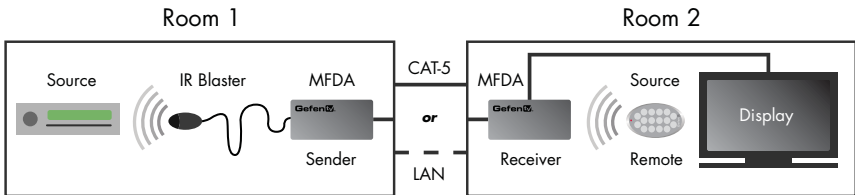

VIDEO CONVERSION TABLE

The following table lists the input and output formats for the GefenTV 1:8 Multi Format Video Distribution Amplifier over Ethernet. Note that some output timings may differ from input timings. This is a limitation of the hardware. For example, a Component input of 1080p 60Hz (at the Sender) is limited to 720p 60Hz on the output (at the Receiver).

Input and Output Formats			
Input Frequency		Output Frequency	
		VGA	YPbPr
VGA	640x480 60Hz	640x480 60Hz	480p 60Hz
	800x600 60Hz	800x600 60Hz	480p 60Hz
	1024x768 60Hz	1024x768 60Hz	720p 60Hz
	1280x768 60Hz	1280x768 60Hz	720p 60Hz
	1280x1024 60Hz	1280x1024	720p 60Hz
Component	480i 60Hz	640x480 60Hz	480p 60Hz
	480p 60Hz	640x480 60Hz	480p 60Hz
	576i 50Hz	800x600 75Hz	576p 50 Hz
	576p 50Hz	800x600 75 Hz	576p 50Hz
	720p 60Hz	1280x720 60Hz	720p 60Hz
	720p 50Hz	1280x720 60Hz	720p 60Hz
	1080i 60Hz	1280x720 60Hz	720p 60Hz
	1080i 50Hz	1280x720 60Hz	720p 60Hz
	1080p 60Hz	1280x720 60Hz	720p 60Hz
	1080p 50Hz	1280x720 60Hz	720p 60Hz
S-Video	480i 60Hz	640x480 60Hz	480p 60Hz
	576i 50Hz	800x600 75Hz	576p 50Hz
Composite	480i 60Hz	640x480 60Hz	480p 60Hz
	576i 50Hz	800x600 75Hz	576p 50Hz

SPECIFICATIONS

PCM Encoding.....2-channel 48KHz 16-bit sampling

Power Supply.....2 x 12V @ 1A each

Audio Inputs/Outputs.....3.5mm mini-stereo jacks

Video Inputs:

VGA.....1280X1024@60Hz (max)

Component.....1080p60Hz (max)

Composite & S-Video.....480i@60Hz, 576i@50Hz (max)

Video Outputs:

VGA.....1280X1024@60Hz (max)

Component.....720p@60Hz (max)

Communication Protocol.....Full Duplex

Ethernet Standard.....IEEE 802.3

Network Bandwidth.....40Mb/s ~ 100Mb/s

Operating Temperature.....0-40 degrees C

Operating Humidity.....90% maximum (non-condensing)

Dimensions.....4.5"W x 1.3"H x 7.25"D (Sender / Receiver)

WARRANTY

Gefen warrants the equipment it manufactures to be free from defects in material and workmanship.

If equipment fails because of such defects and Gefen is notified within two (2) years from the date of shipment, Gefen will, at its option, repair or replace the equipment, provided that the equipment has not been subjected to mechanical, electrical, or other abuse or modifications. Equipment that fails under conditions other than those covered will be repaired at the current price of parts and labor in effect at the time of repair. Such repairs are warranted for ninety (90) days from the day of reshipment to the Buyer.

This warranty is in lieu of all other warranties expressed or implied, including without limitation, any implied warranty or merchantability or fitness for any particular purpose, all of which are expressly disclaimed.

1. Proof of sale may be required in order to claim warranty.
2. Customers outside the US are responsible for shipping charges to and from Gefen.
3. Copper cables are limited to a 30 day warranty and cables must be in their original condition.

The information in this manual has been carefully checked and is believed to be accurate. However, Gefen assumes no responsibility for any inaccuracies that may be contained in this manual. In no event will Gefen be liable for direct, indirect, special, incidental, or consequential damages resulting from any defect or omission in this manual, even if advised of the possibility of such damages. The technical information contained herein regarding the features and specifications is subject to change without notice.

* ma - GTV - MFDA - 148*

Rev X8

20600 Nordhoff St., Chatsworth CA 91311

1-800-545-6900 • 818-772-9100 • fax: 818-772-9120

www.gefentv.com • support@gefentv.com

